

THERE ARE MORE CESSNAS FLYING THAN ANY OTHER MAKE



MODEL
182
AND
SKYLANE

1968

OWNER'S MANUAL

WORLD'S LARGEST PRODUCER OF GENERAL AVIATION AIRCRAFT SINCE 1956

PERFORMANCE - SPECIFICATIONS

	Model 182*	Skylane*
GROSS WEIGHT	2800 lbs	2800 lbs
SPEED:		
Top Speed at Sea Level	167 mph	170 mph
Cruise,	159 mph	162 mph
75% Power at 6500 ft.		
RANGE:		
Cruise,	685 mi	695 mi
75% Power at 6500 ft.	4.3 hrs	4.3 hrs
60 Gallons, No Reserve	159 mph	162 mph
Cruise,	905 mi	925 mi
75% Power at 6500 ft.	5.7 hrs	5.7 hrs
79 Gallons, No Reserve	159 mph	162 mph
Optimum Range at 10,000 ft.	905 mi	925 mi
60 Gallons, No Reserve	7.6 hrs	7.6 hrs
	119 mph	121 mph
Optimum Range at 10,000 ft.	1190 mi	1215 mi
79 Gallons, No Reserve	10.0 hrs	10.0 hrs
	119 mph	121 mph
RATE OF CLIMB AT SEA LEVEL	980 fpm	980 fpm
SERVICE CEILING	18,900 ft	18,900 ft
TAKE-OFF:		
Ground Run	625 ft	625 ft
Total Distance Over		
50-Foot Obstacle	1205 ft	1205 ft
LANDING:		
Ground Roll	590 ft	590 ft
Total Distance Over		
50-Foot Obstacle	1350 ft	1350 ft
EMPTY WEIGHT (Approximate)	1570 lbs	1625 lbs
BAGGAGE	120 lbs	120 lbs
WING LOADING: Pounds/Sq Foot	16.1	16.1
POWER LOADING: Pounds/HP.	12.2	12.2
FUEL CAPACITY: Total		
Standard Tanks	65 gal.	65 gal.
Optional Long Range Tanks	84 gal.	84 gal.
OIL CAPACITY:	12 qts	12 qts
(One additional quart is required when optional oil filter is installed.)		
PROPELLER: Constant Speed (Diameter).	82 inches	82 inches
ENGINE: Continental Engine	O-470-R	O-470-R
230 rated BHP at 2600 RPM		

*This manual covers operation of the Model 182/Skylane which is certificated as Model 182L under FAA Type Certificate No. 3A13.

CONGRATULATIONS

Welcome to the ranks of Cessna Owners! Your Cessna has been designed and constructed to give you the most in performance, economy, and comfort. It is our desire that you will find flying it, either for business or pleasure, a pleasant and profitable experience.

This Owner's Manual has been prepared as a guide to help you get the most pleasure and utility from your Model 182/Skylane. It contains information about your Cessna's equipment, operating procedures, and performance; and suggestions for its servicing and care. We urge you to read it from cover to cover, and to refer to it frequently.

Our interest in your flying pleasure has not ceased with your purchase of a Cessna. World-wide, the Cessna Dealer Organization backed by the Cessna Service Department stands ready to serve you. The following services are offered by most Cessna Dealers:

FACTORY TRAINED PERSONNEL to provide you with courteous expert service.



FACTORY APPROVED SERVICE EQUIPMENT to provide you with the most efficient and accurate workmanship possible.

A STOCK OF GENUINE CESSNA SERVICE PARTS on hand when you need them.

THE LATEST AUTHORITATIVE INFORMATION FOR SERVICING CESSNA AIRPLANES, since Cessna Dealers have all of the Service Manuals and Parts Catalogs, kept current by Service Letters and Service News Letters, published by Cessna Aircraft Company.

We urge all Cessna owners to use the Cessna Dealer Organization to the fullest.

A current Cessna Dealer Directory accompanies your new airplane. The Directory is revised frequently, and a current copy can be obtained from your Cessna Dealer. Make your Directory one of your cross-country flight planning aids; a warm welcome awaits you at every Cessna Dealer.

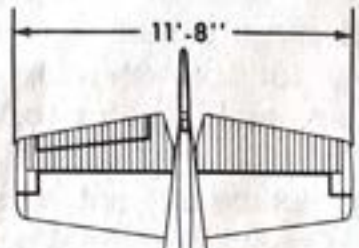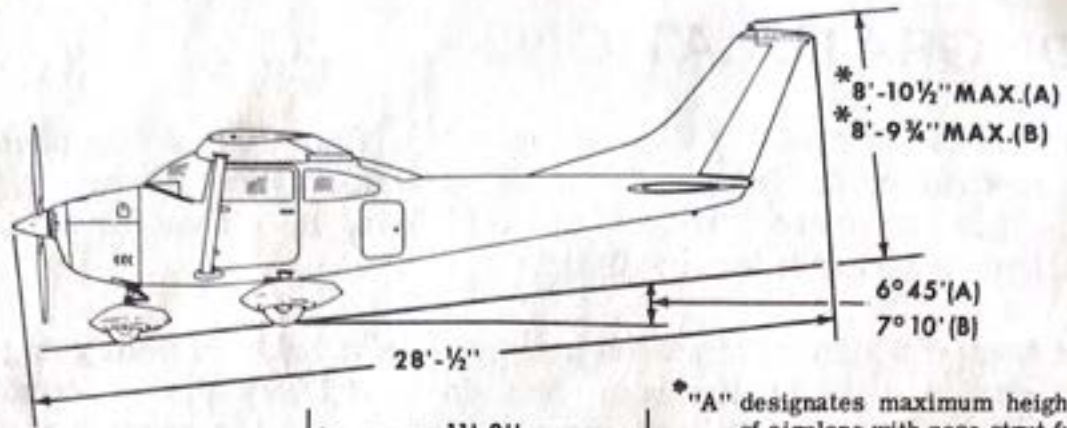

* "A" designates maximum height of airplane with nose strut fully depressed, 5.00×5 nose gear tire, 6.00×6 main gear tires and an optional flashing beacon installed.

* "B" designates maximum height of airplane with nose strut fully depressed, 6.00×6 nose gear tire, 8.00×6 main gear tires and an optional flashing beacon installed.

PRINCIPAL DIMENSIONS



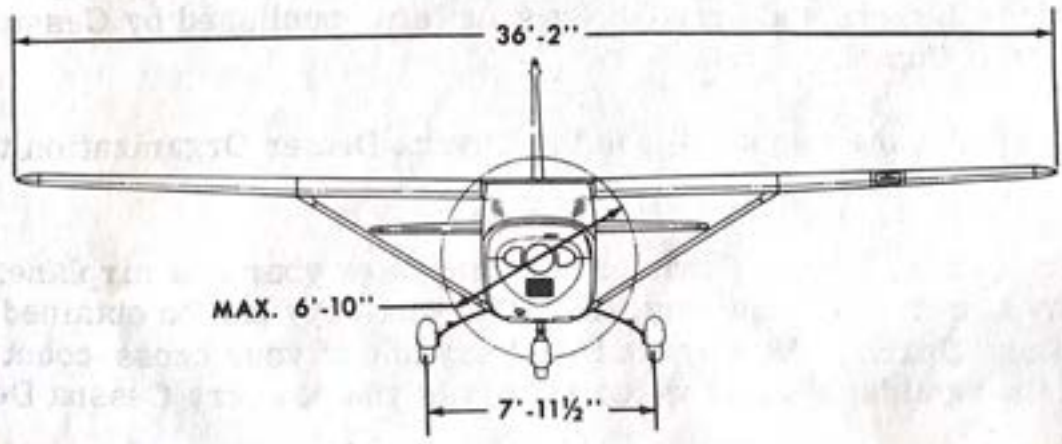


TABLE OF CONTENTS

	Page
SECTION I - OPERATING CHECK LIST.....	1-1
SECTION II - DESCRIPTION AND OPERATING DETAILS	2-1
SECTION III - OPERATING LIMITATIONS.....	3-1
SECTION IV - CARE OF THE AIRPLANE	4-1
OWNER FOLLOW-UP SYSTEM	4-10
SECTION V - OPERATIONAL DATA	5-1
SECTION VI - OPTIONAL SYSTEMS	6-1
ALPHABETICAL INDEX	Index-1

This manual describes the operation and performance of both the Cessna Model 182 and the Cessna Skylane. Equipment described as "Optional" denotes that the subject equipment is optional on the Model 182. Much of this equipment is standard on the Skylane model.

EXTERIOR INSPECTION DIAGRAM

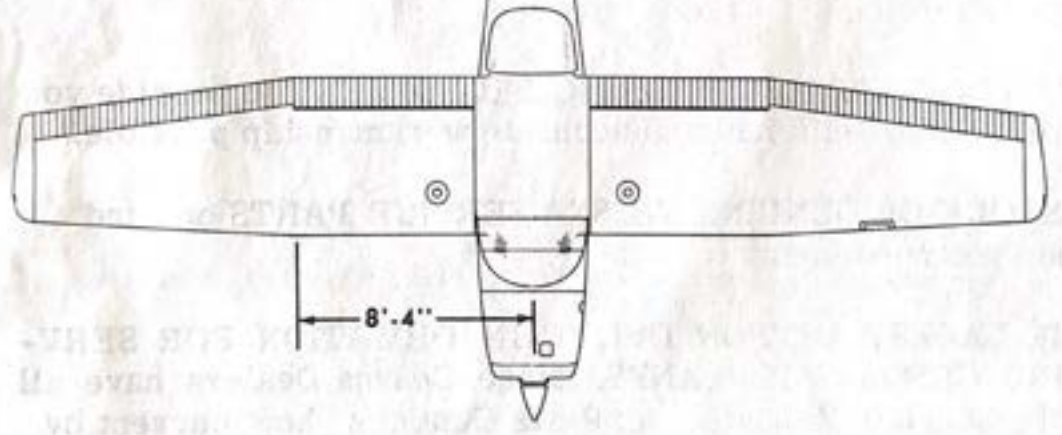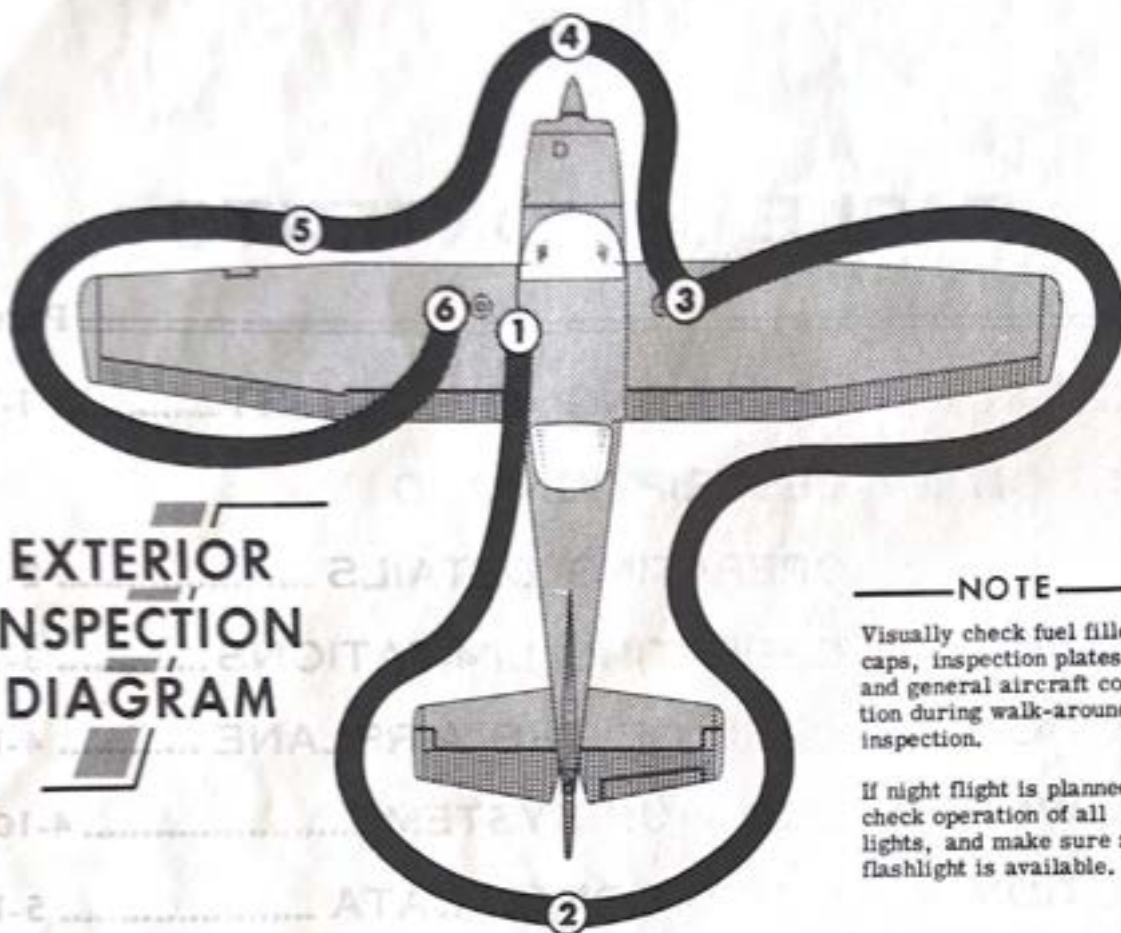

NOTE

Visually check fuel filler caps, inspection plates, and general aircraft condition during walk-around inspection.

If night flight is planned, check operation of all lights, and make sure a flashlight is available.

- ①
 - a. Turn on master switch and check fuel quantity indicators; then turn master switch "OFF."
 - b. Check ignition switch "OFF."
 - c. Check fuel tank selector valve handle on "BOTH."
 - d. Remove control wheel lock.
 - e. Check baggage door for security.
 - f. Check nose wheel strut and tire for proper inflation.
 - g. Disconnect nose tie-down.
 - h. Check oil level. Do not operate with less than nine quarts. Fill for extended flight.
 - i. On first flight of day and after each refueling, pull out strainer drain knob for about four seconds to clear fuel strainer of possible water and sediment. Check strainer drain closed. If water is observed, there is a possibility that the wing tank sumps contain water. Thus, the wing tank sump drain plugs and fuel line drain plug should be removed to check for the presence of water.
- ②
 - a. Remove rudder gust lock, if installed.
 - b. Disconnect tail tie-down.
- ③
 - a. Check main wheel tire for proper inflation.
 - b. Inspect airspeed static source hole on side of fuselage for stoppage.
 - c. Disconnect wing tie-down.
- ④
 - a. Check propeller and spinner for nicks and security, and propeller for oil leaks.
 - b. Check carburetor air filter for restrictions by dust or other foreign matter.
- ⑤
 - a. Remove pitot tube cover, if installed, and check pitot tube opening for stoppage.
 - b. Check fuel tank vent opening for stoppage.
- ⑥ Same as ③.

Figure 1-1.

Section I

OPERATING CHECK LIST

One of the first steps in obtaining the utmost performance, service, and flying enjoyment from your Cessna is to familiarize yourself with your airplane's equipment, systems, and controls. This can best be done by reviewing this equipment while sitting in the airplane. Those items whose function and operation are not obvious are covered in Section II.

Section I lists, in Pilot's Check List form, the steps necessary to operate your airplane efficiently and safely. It is not a check list in its true form as it is considerably longer, but it does cover briefly all of the points that you should know for a typical flight.

The flight and operational characteristics of your airplane are normal in all respects. There are no "unconventional" characteristics or operations that need to be mastered. All controls respond in the normal way within the entire range of operation. All airspeeds mentioned in Sections I and II are indicated airspeeds. Corresponding calibrated airspeeds may be obtained from the Airspeed Correction Table in Section V.

BEFORE ENTERING THE AIRPLANE.

- (1) Make an exterior inspection in accordance with figure 1-1.

BEFORE STARTING THE ENGINE.

- (1) Seats and Seat Belts -- Adjust and lock.
- (2) Flight Controls -- Check.
- (3) Brakes -- Test and set.
- (4) Master Switch -- "ON."
- (5) Cowl Flaps -- "OPEN." (Move lever out of locking hole to reposition.)
- (6) Elevator and Rudder Trim -- "TAKE-OFF" setting.
- (7) Fuel Selector Valve -- "BOTH."
- (8) Turn all radio switches "OFF."

STARTING ENGINE.

- (1) Carburetor Heat -- Cold.
- (2) Mixture -- Rich.
- (3) Propeller -- High RPM.
- (4) Throttle -- Cracked (one-half inch).
- (5) Primer -- As required.
- (6) Ignition Switch -- "START." Hold until engine fires, but not longer than 30 seconds.
- (7) Ignition Switch -- Release to "BOTH" (immediately after engine fires).

NOTE

If engine has been overprimed, start with throttle open 1/4 to 1/2 full open. Reduce throttle to idle when engine fires.

NOTE

After starting, check for oil pressure indication within 30 seconds in normal temperatures and 60 seconds in cold temperatures. If no indication appears, shut off engine and investigate.

BEFORE TAKE-OFF.

- (1) Fuel Selector Valve -- "BOTH."
- (2) Throttle Setting -- 1700 RPM.
- (3) Engine Instruments -- Check.
- (4) Carburetor Heat -- Check operation, then set to cold unless icing conditions prevail.
- (5) Ammeter -- Check.
- (6) Suction Gage -- Check (4.6 to 5.4 inches of mercury).
- (7) Magnetos - Check (50 RPM maximum differential between magnetos).
- (8) Propeller -- Cycle from high to low RPM; return to high RPM (full in).
- (9) Flight Controls -- Recheck.
- (10) Wing Flaps -- Check operation and set 0° to 20°.
- (11) Cowl Flaps -- Full "OPEN."
- (12) Elevator and Rudder Trim -- Recheck "TAKE-OFF" setting.
- (13) Cabin Doors -- Closed and locked.
- (14) Flight Instruments and Radios -- Set.
- (15) Optional Autopilot or Wing Leveler -- "OFF."

TAKE-OFF.

NORMAL TAKE-OFF.

- (1) Wing Flaps -- Up.
- (2) Carburetor Heat -- Cold.
- (3) Power -- Full throttle and 2600 RPM.
- (4) Elevator Control -- Raise nosewheel at 60 MPH.
- (5) Climb Speed -- 90 MPH until all obstacles are cleared, then set up climb speed as shown in "NORMAL CLIMB" paragraph.

MAXIMUM PERFORMANCE TAKE-OFF.

- (1) Wing Flaps -- 20°.
- (2) Carburetor Heat -- Cold.
- (3) Brakes -- Apply.
- (4) Power -- Full throttle and 2600 RPM.
- (5) Brakes -- Release.
- (6) Elevator Control -- Maintain slightly tail-low attitude.
- (7) Climb Speed -- 61 MPH until all obstacles are cleared, then set up climb speed as shown in "MAXIMUM PERFORMANCE CLIMB."
- (8) Wing Flaps -- Up after obstacles are cleared.

CLIMB.

NORMAL CLIMB.

- (1) Air Speed -- 100 to 120 MPH.
- (2) Power -- 23 inches and 2450 RPM.
- (3) Fuel Selector Valve -- "BOTH."
- (4) Mixture -- Full rich (unless engine is rough due to excessively rich mixture).
- (5) Cowl Flaps -- Open as required.

MAXIMUM PERFORMANCE CLIMB.

- (1) Air Speed -- 88 MPH (sea level) to 84 MPH (10,000 feet).
- (2) Power -- Full throttle and 2600 RPM.
- (3) Fuel Selector Valve -- "BOTH."
- (4) Mixture -- Full rich (unless engine is rough).
- (5) Cowl Flaps -- Full "OPEN."

CRUISING.

- (1) Engine Power -- 15 to 23 inches of manifold pressure and 2200 - 2450 RPM.
- (2) Cowl Flaps -- Open as required.
- (3) Elevator and Rudder Trim -- Adjust.
- (4) Mixture -- Lean.

LET-DOWN.

- (1) Mixture -- Rich.
- (2) Power -- As desired.
- (3) Carburetor Heat -- Apply (if icing conditions exist).

BEFORE LANDING.

- (1) Fuel Selector Valve -- "BOTH."
- (2) Mixture -- Rich.
- (3) Propeller -- High RPM.
- (4) Cowl Flaps -- "CLOSED."
- (5) Carburetor Heat -- Apply before closing throttle.
- (6) Airspeed -- 80 to 90 MPH (flaps retracted).
- (7) Wing Flaps -- 0° to 40° (below 110 MPH).
- (8) Airspeed -- 70 to 80 MPH (flaps extended).
- (9) Elevator and Rudder Trim -- Adjust.

NORMAL LANDING.

- (1) Landing Technique -- Conventional for all flap settings.

AFTER LANDING.

- (1) Cowl Flaps -- "OPEN."
- (2) Wing Flaps -- Retract.
- (3) Carburetor Heat -- Cold.

SECURE AIRCRAFT.


- (1) Mixture -- Idle cut-off (pulled full out).

NOTE

Do not open throttle as engine stops since this actuates the accelerator pump.

- (2) All Switches -- Off.
- (3) Brakes -- Set.
- (4) Control Lock -- Installed.

INSTRUMENT PANEL

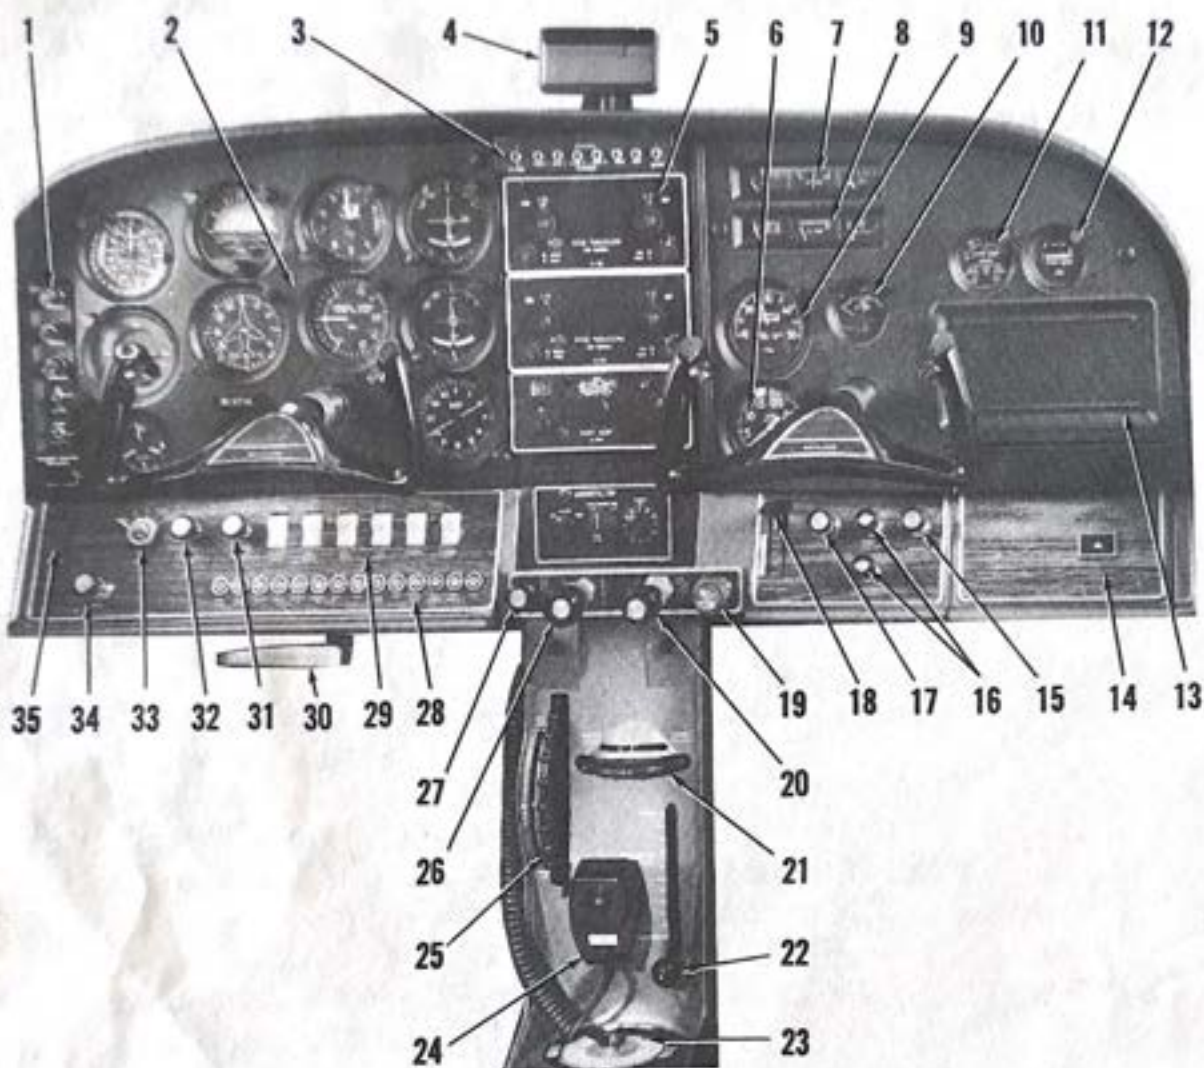

- | | | |
|--|--|---------------------------------|
| 1. Marker Beacon Indicator Lights and Switches (Opt) | 11. Carburetor Air Temperature Gage (Opt) | 24. Microphone |
| 2. Flight Instrument Group | 12. Flight Hour Recorder (Opt) | 25. Elevator Trim Control Wheel |
| 3. Radio Selector Switches (Opt) | 13. Optional Radio Space | 26. Throttle |
| 4. Rear View Mirror (Opt) | 14. Map Compartment | 27. Carburetor Air Heat Knob |
| 5. Radios (Opt) | 15. Defroster Control Knob | 28. Circuit Breakers |
| 6. Tachometer | 16. Cabin Heat and Cabin Air Control Knobs | 29. Electrical Switches |
| 7. Fuel Quantity Indicators and Ammeter | 17. Cigar Lighter | 30. Parking Brake Handle |
| 8. Cylinder Head Temperature Gage, Oil Temperature Gage, and Oil Pressure Gage | 18. Wing Flap Switch | 31. Radio Dial Lights Rheostat |
| 9. Manifold Pressure Gage | 19. Mixture Control Knob | 32. Instrument Lights Rheostat |
| 10. Exhaust Gas Temperature Gage (Opt) | 20. Propeller Control Knob | 33. Ignition Switch |
| | 21. Rudder Trim Control Wheel | 34. Primer |
| | 22. Cowl Flap Control Handle | 35. Master Switch |
| | 23. Fuel Selector Valve Handle | |

Figure 2-1.

Section II

DESCRIPTION AND OPERATING DETAILS

The following paragraphs describe the systems and equipment whose function and operation is not obvious when sitting in the airplane. This section also covers in somewhat greater detail some of the items listed in Check List form in Section I that require further explanation.

FUEL SYSTEM.

Fuel is supplied to the engine from two tanks, one in each wing. With the fuel selector valve on "BOTH," the total usable fuel for all flight conditions is 60 gallons for the standard tanks and 79 gallons for optional long range tanks.

Fuel from each wing tank flows by gravity to a selector valve. Depending upon the setting of the selector valve, fuel from the left, right, or both tanks flows through a fuel strainer and carburetor to the engine induction system.

IMPORTANT

The fuel selector valve should be in the "BOTH" position for take-off, climb, landing, and maneuvers that involve prolonged slips or skids. Operation from either "LEFT" or "RIGHT" tank is reserved for cruising flight.

NOTE

When the fuel selector valve handle is in the "BOTH" position in cruising flight, unequal fuel flow from each tank may occur if the wings are not maintained exactly level. Resulting wing heaviness can be alleviated gradually by turning the selector valve handle to the tank in the "heavy" wing.

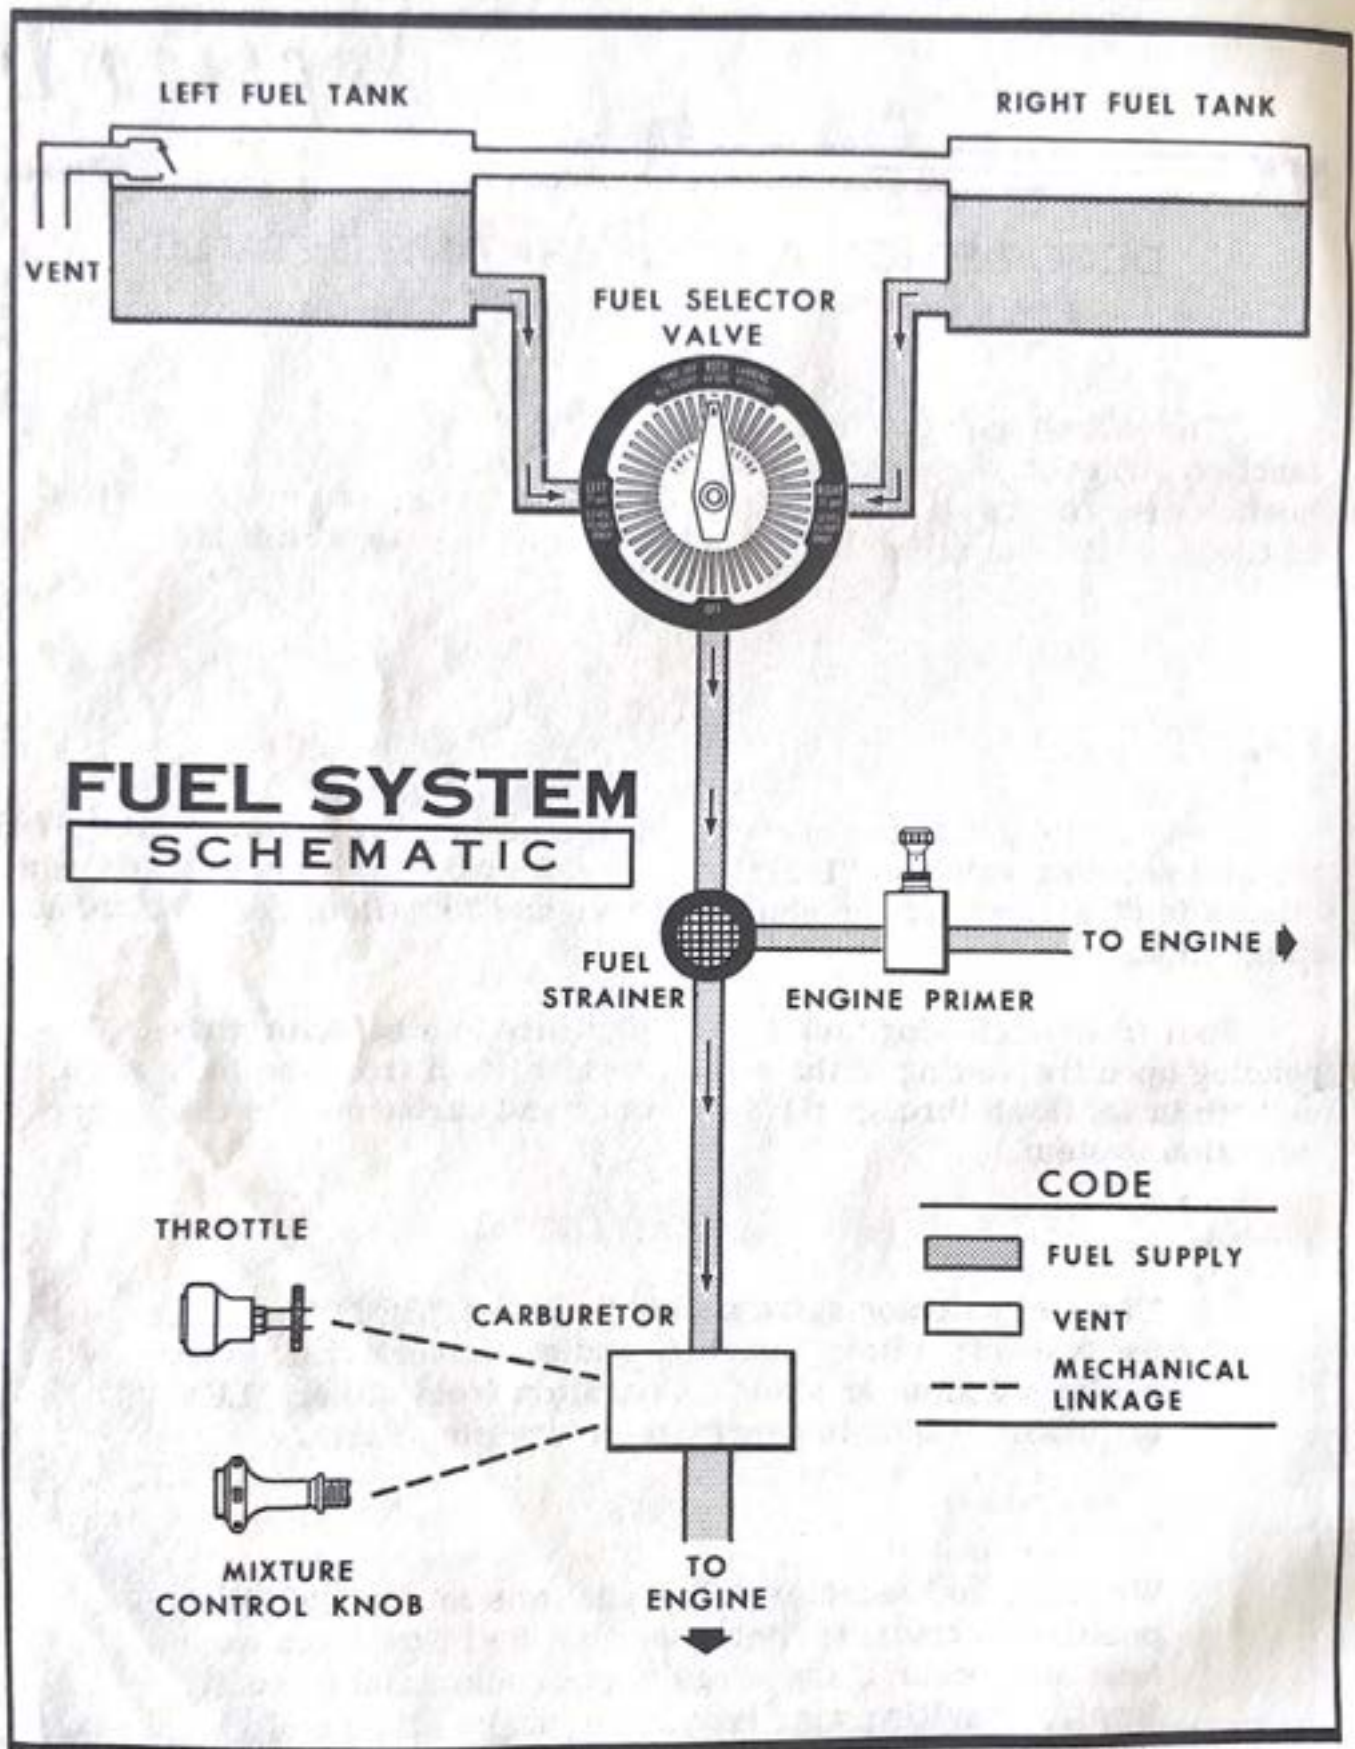


Figure 2-2.

ELECTRICAL SYSTEM.

Electrical energy is supplied by a 14-volt, direct-current system powered by an engine-driven alternator (see figure 2-3). The 12-volt battery is located aft of the rear baggage compartment wall. Power is supplied to all electrical circuits through a split bus bar, one side containing electronic system circuits and the other side having general electrical system circuits. Both sides of the bus are on at all times except when either an external power source is connected or the starter switch is turned on; then a power contactor is automatically activated to open the circuit to the electronics bus. Isolating the electronic circuits in this manner prevents harmful transient voltages from damaging the semiconductors in the electronics equipment.

AMMETER.

The ammeter indicates the flow of current, in amperes, from the alternator to the battery or from the battery to the aircraft electrical system. When the engine is operating and the master switch is "ON," the ammeter indicates the charging rate applied to the battery. In the event the alternator is not functioning or the electrical load exceeds the output of the alternator, the ammeter indicates the discharge rate of the battery.

CIRCUIT BREAKERS AND FUSES.

Most of the electrical circuits in the airplane are protected by "push-to-reset" circuit breakers mounted on the instrument panel. Exceptions to this are the battery contactor closing (external power) circuit, and the optional clock and flight hour recorder circuits which have fuses mounted near the battery. Also, the cigar lighter is protected by a manually-reset type circuit breaker mounted directly on the back of the lighter behind the instrument panel. Two automatically resetting circuit breakers mounted behind the instrument panel protect the stall warning transmitter and horn circuit, the alternator field and wiring, and the optional turn coordinator or turn-and-bank indicator circuit.

FLASHING BEACON (OPT).

The flashing beacon should not be used when flying through clouds or overcast; the flashing light reflected from water droplets or particles in

ELECTRICAL SYSTEM SCHEMATIC

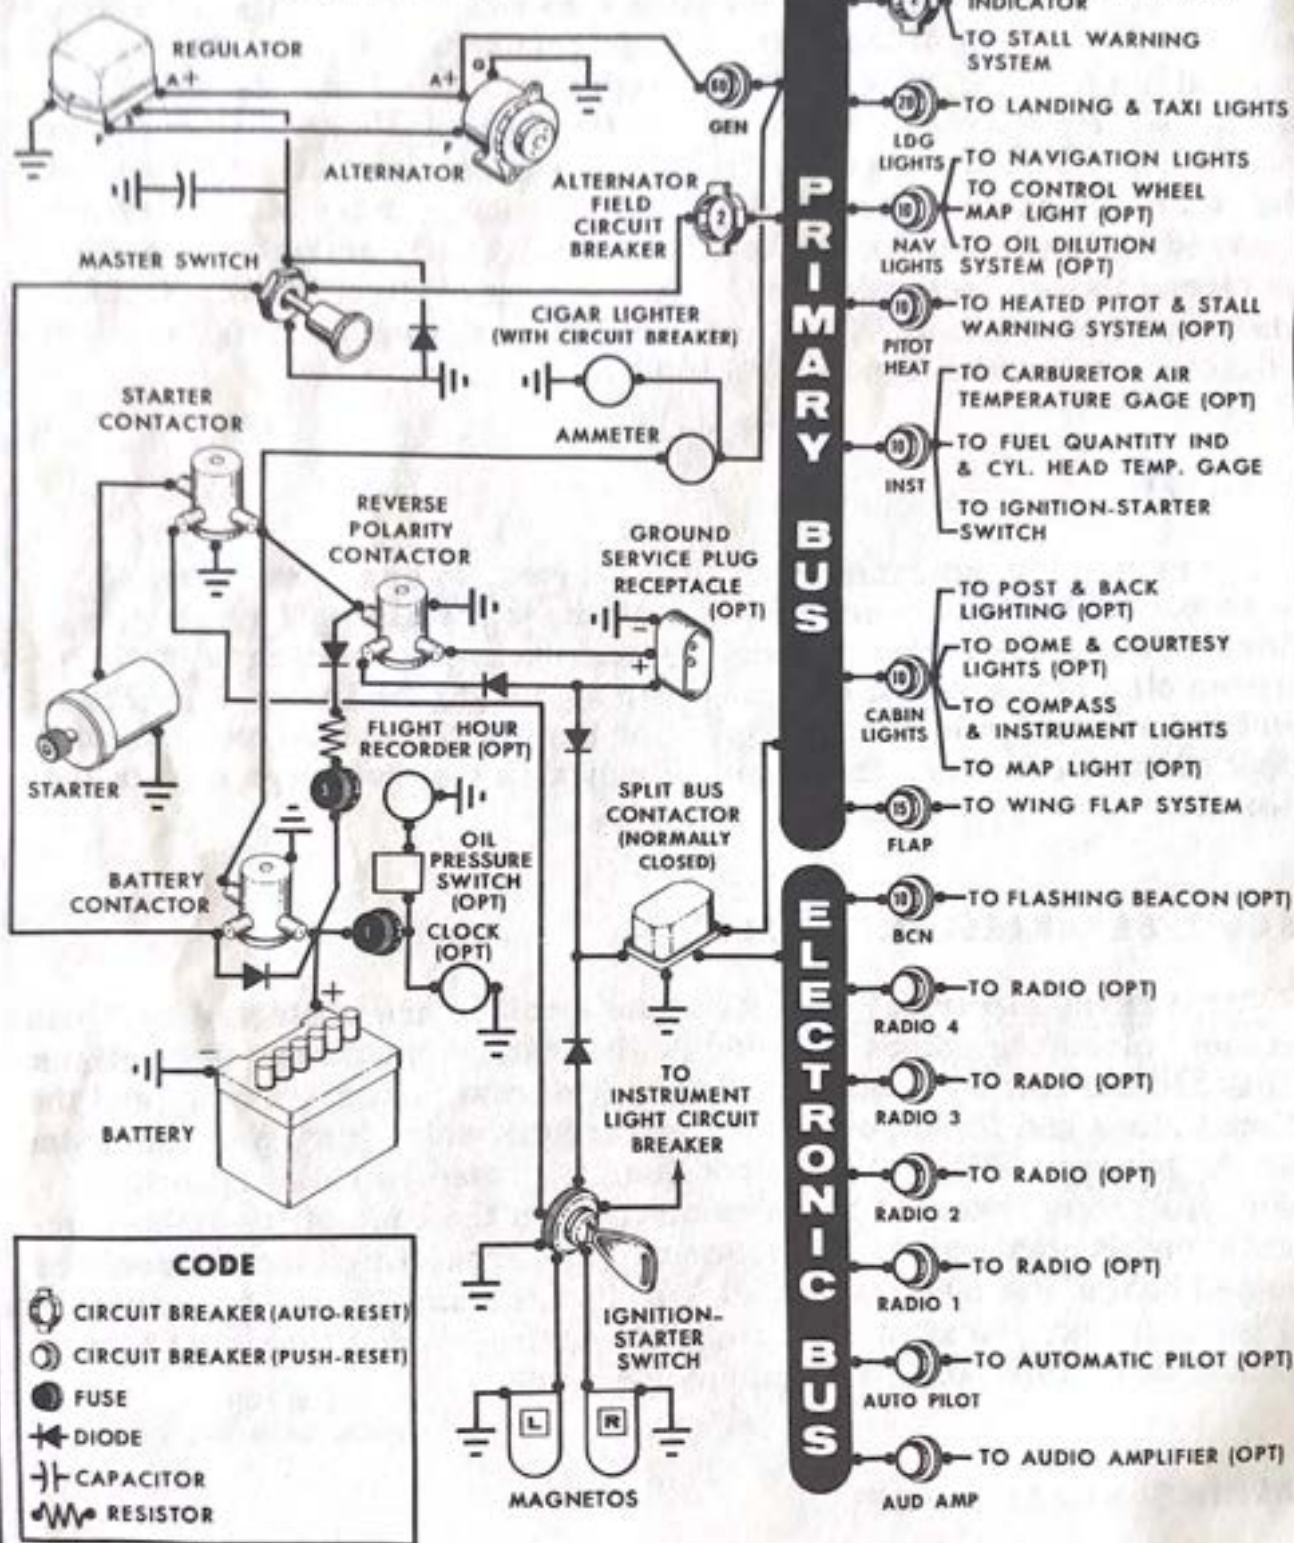


Figure 2-3.

the atmosphere, particularly at night, can produce vertigo and loss of orientation.

CONTROL WHEEL MAP LIGHT (OPT).

A map light may be installed on the bottom of the pilot's control wheel. The light illuminates the lower portion of the cabin just forward of the pilot and is helpful when checking maps and other flight data during night operation. A small knurled rheostat knob just forward of the lower face of the control wheel is used to turn on the light and adjust its intensity.

CABIN HEATING, VENTILATING AND DEFROSTING SYSTEM.

The temperature and volume of airflow into the cabin can be regulated to any degree desired by manipulation of the push-pull "CABIN HEAT" and "CABIN AIR" knobs. Both control knobs are the double-button type with friction locks to permit intermediate settings.

NOTE


Always pull out the "CABIN AIR" knob slightly when the "CABIN HEAT" knob is out. This action increases the airflow through the system, increasing efficiency, and blends cool outside air with the exhaust manifold heated air, thus eliminating the possibility of overheating the system ducting.

The rotary type "DEFROST" knob regulates the airflow for windshield defrosting.

Front cabin heat and ventilating air is supplied by outlet holes spaced across a cabin manifold just forward of the pilot's and copilot's feet. Rear cabin heat and air are supplied by two ducts from the manifold, one extending down each side of the cabin to an outlet at the front door post at floor level. Windshield defrost air is also supplied by a duct leading from the cabin manifold.

Separate adjustable ventilators supply additional air; one near each upper corner of the windshield supplies air for the pilot and copilot, and two in the rear cabin ceiling supply air to the rear seat passengers.

TAXIING DIAGRAM

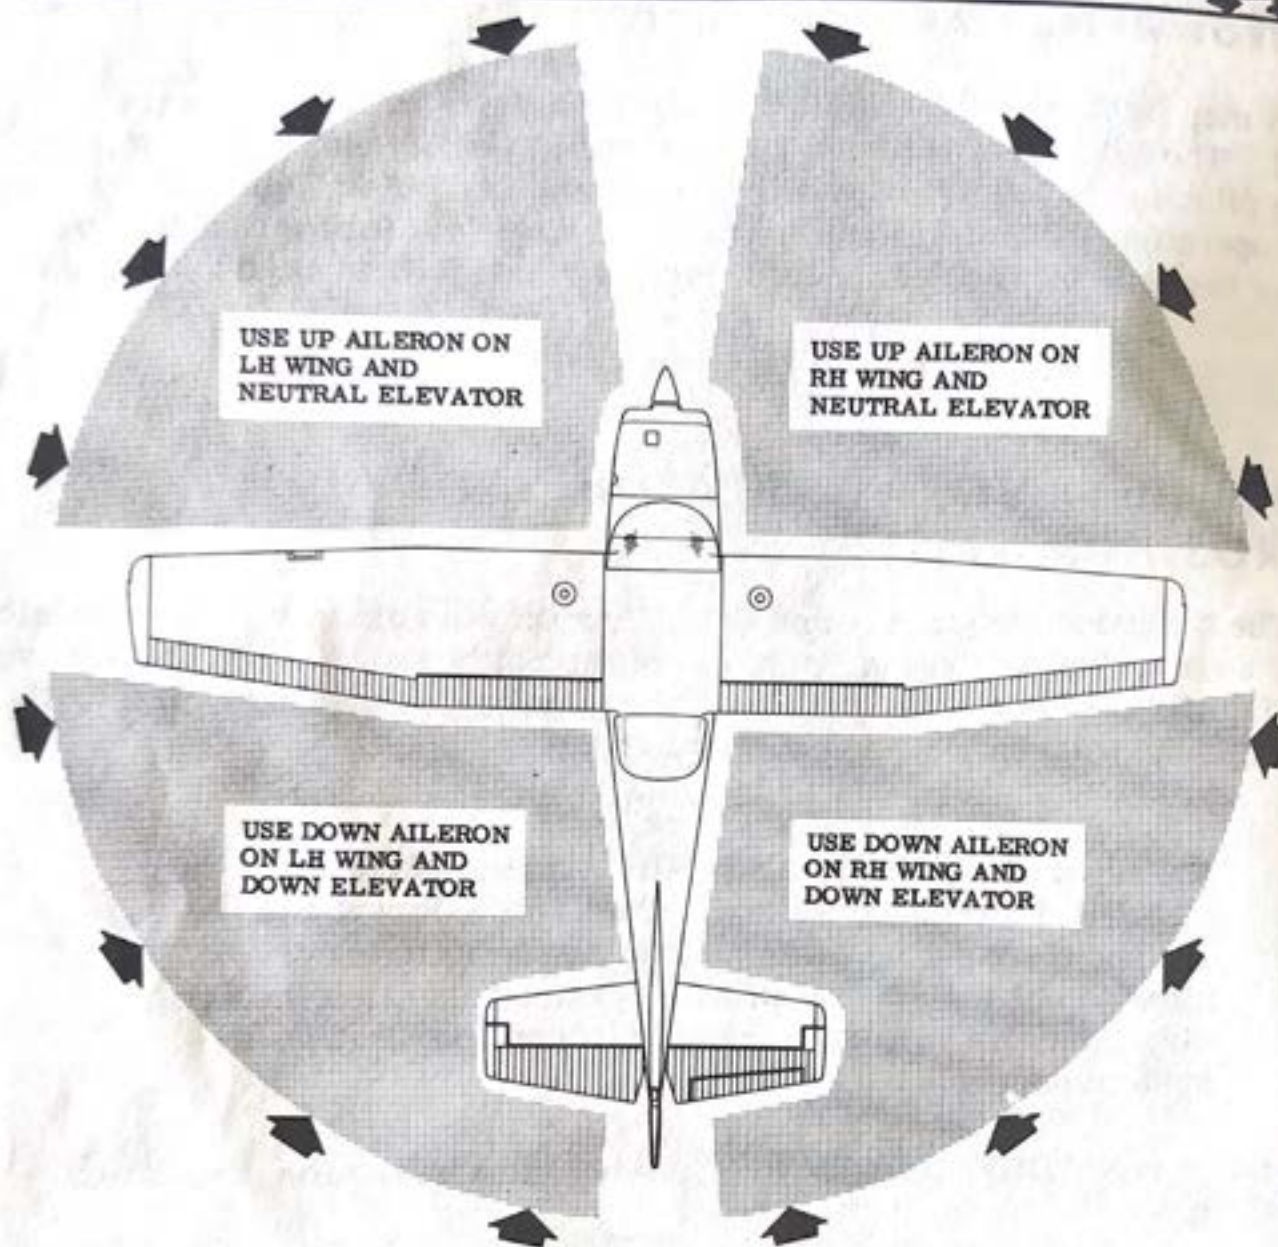

➔ WIND DIRECTION

NOTE

Strong quartering tail winds require caution. Avoid sudden bursts of the throttle and sharp braking when the airplane is in this attitude. Use the steerable nose wheel and rudder to maintain direction.

Figure 2-4.

STARTING ENGINE.

Ordinarily the engine starts easily with one or two strokes of the primer in warm temperatures to six strokes in cold weather with the throttle open approximately 1/2 inch. In extremely cold temperatures it may be necessary to continue priming while cranking. Weak intermittent explosions followed by puffs of black smoke from the exhaust stack indicate overpriming or flooding. Excess fuel can be cleared from the combustion chambers by the following procedure: Set the mixture control full lean and the throttle full open; then crank the engine through several revolutions with the starter. Repeat the starting procedure without any additional priming.

If the engine is underprimed (most likely in cold weather with a cold engine) it will not fire at all. Additional priming will be necessary for the next starting attempt.

As soon as the cylinders begin to fire, open the throttle slightly to keep it running.

If prolonged cranking is necessary, allow the starter motor to cool at frequent intervals, since excessive heat may damage the armature.

TAXIING.

The carburetor air heat knob should be pushed full in during all ground operations unless heat is absolutely necessary for smooth engine operation. When the knob is pulled out to the heat position, air entering the engine is not filtered.

Taxiing over loose gravel or cinders should be done at low engine speed to avoid abrasion and stone damage to the propeller tips.

BEFORE TAKE-OFF.

Since the engine is closely cowled for efficient in-flight cooling, precautions should be taken to avoid overheating on the ground. Full throttle

checks on the ground are not recommended unless the pilot has good reason to suspect that the engine is not turning up properly.

The magneto check should be made at 1700 RPM with the propeller in flat pitch as follows: Move the ignition switch first to "R" position and note RPM. Then move switch back to "BOTH" position to clear the other set of plugs. Then move switch to "L" position and note RPM. The difference between the two magnetos operated singly should not be more than 50 RPM. If there is a doubt concerning the operation of the ignition system, RPM checks at a higher engine speed will usually confirm whether a deficiency exists.

An absence of RPM drop may be an indication of faulty grounding of one side of the ignition system or should be cause for suspicion that the magneto timing is set in advance of the setting specified.

TAKE-OFF.

It is important to check full-throttle engine operation early in the take-off run. Any signs of rough engine operation or sluggish engine acceleration is good cause for discontinuing the take-off.

Full throttle runups over loose gravel are especially harmful to propeller tips. When take-offs must be made over a gravel surface, it is very important that the throttle be advanced slowly. This allows the airplane to start rolling before high RPM is developed, and the gravel will be blown back of the propeller rather than pulled into it.

Most engine wear occurs from improper operation before the engine is up to normal operating temperatures, and operating at high powers and RPM's. For this reason the use of maximum power for take-off climb should be limited to that absolutely necessary for safety. Whenever possible, reduce take-off power to normal climb power.

Normal take-offs are accomplished with wing flaps up, cowl flaps open, full throttle, and 2600 RPM. Reduce power to 23 inches of manifold pressure and 2450 RPM as soon as practical to minimize engine wear.

Using 20° wing flaps reduces the ground run and total distance over the obstacle by approximately 20 per cent. Soft field take-offs are performed with 20° flaps by lifting the airplane off the ground as soon as practical in a slightly tail-low attitude. However, the airplane should be leveled off immediately to accelerate to a safe climb speed.

If 20° wing flaps are used for take-off, they should be left down until all obstacles are cleared. To clear an obstacle with wing flaps 20 degrees, the best angle-of-climb speed (61 MPH, IAS) should be used. If no obstructions are ahead, a best "flaps up" rate-of-climb speed (88 MPH, IAS) would be most efficient. These speeds vary slightly with altitude, but they are close enough for average field elevations.

Flap deflections of 30° to 40° are not recommended at any time for take-off.

Take-offs into strong crosswinds normally are performed with the minimum flap setting necessary for the field length, to minimize the drift angle immediately after take-off. The airplane is accelerated to a speed slightly higher than normal, then pulled off abruptly to prevent possible settling back to the runway while drifting. When clear of the ground, make a coordinated turn into the wind to correct for drift.

CLIMB.

A cruising climb at 23 inches of manifold pressure, 2450 RPM (approximately 75% power) and 100 to 120 MPH is recommended to save time and fuel for the overall trip. In addition, this type of climb provides better engine cooling, less engine wear, and more passenger comfort due to lower noise level.

If it is necessary to climb rapidly to clear mountains or reach favorable winds at high altitudes, the best rate-of-climb speed should be used with maximum power. This speed is 88 MPH at sea level, decreasing 2 MPH for each 5000 feet above sea level.

If an obstruction ahead requires a steep climb angle, the airplane should be flown at the best angle of climb with flaps up and maximum power. This speed is 70 MPH.

In a balked landing (go-around) climb, the wing flap setting should be reduced to 20° immediately after full power is applied. After all obstacles are cleared and a safe altitude and airspeed are obtained, the wing flaps should be retracted.

CRUISE.

Normal cruising is done between 65% and 75% power. The power

settings required to obtain these powers at various altitudes and outside air temperatures can be determined by using your Cessna Power Computer or the OPERATIONAL DATA, Section V.

The Optimum Cruise Performance table (figure 2-5) shows that cruising can be done most efficiently at higher altitudes because very nearly the same cruising speed can be maintained at much less power.

For a given throttle setting, select the lowest engine RPM in the green arc range that will give smooth engine operation.

The cowl flaps should be adjusted to maintain the cylinder head temperature at approximately two thirds of the normal operating (green arc) range to assure prolonged engine life.

To achieve the range figures shown in Section V, the mixture should be leaned as follows: pull mixture control out until engine becomes rough; then enrich mixture slightly beyond this point. Any change in altitude, power, or carburetor heat will require a change in the lean mixture setting.

Application of full carburetor heat may enrich the mixture to the point of engine roughness. To avoid this, lean the mixture as instructed in the preceding paragraph.

OPTIMUM CRUISE PERFORMANCE

%BHP	ALTITUDE	TRUE AIRSPEED	RANGE (Std. Tanks)
75	6500	162	695
70	8000	160	735
65	10,000	158	785

Figure 2-5.

STALLS.

The stall characteristics are conventional and aural warning is provided by a stall warning horn which sounds between 5 and 10 MPH above the stall in all configurations.

Power-off stall speeds at maximum gross weight and aft c. g. position are presented in figure 5-2 as calibrated airspeeds since indicated airspeeds are unreliable near the stall.

SPINS.

Intentional spins are prohibited in this airplane. Should an inadvertent spin occur, standard light plane recovery techniques should be used.

LANDING.

Landings are usually made on the main wheels first to reduce the landing speed and the subsequent need for braking in the landing roll. The nosewheel is lowered gently to the runway after the speed has diminished to avoid unnecessary nose gear load. This procedure is especially important in rough field landings.

For short field landings, make a power-off approach at 69 MPH, IAS with 40° flaps and land on the main wheels first. Immediately after touchdown, lower the nose gear to the ground and apply heavy braking as required. For maximum brake effectiveness after all three wheels are on the ground, retract the flaps, hold full nose up elevator and apply maximum possible brake pressure without sliding the tires.

COLD WEATHER OPERATION.

STARTING.

Prior to starting on a cold morning, it is advisable to pull the propeller through several times by hand to "break loose" or "limber" the oil, thus conserving battery energy. In extremely cold (0° F and lower) weather, the use of an external preheater (for both the engine and

battery) and an external power source is recommended whenever possible to obtain positive starting and to reduce wear and abuse to the engine and the electrical system.

Pre-heat will thaw the oil trapped in the oil cooler, which probably will be congealed prior to starting in extremely cold temperatures. When using an external power source, the position of the master switch is important. Refer to Section VI, paragraph GROUND SERVICE PLUG RECEPTACLE, for operating details.

Cold weather starting procedures are as follows:

With Preheat:

(1) With ignition switch "OFF" and throttle open 1/2", prime the engine four to eight strokes as the propeller is being turned over by hand.

NOTE

Use heavy strokes of primer for best atomization of fuel. After priming, push primer all the way in and turn to locked position to avoid possibility of engine drawing fuel through the primer.

- (2) Clear propeller.
- (3) Turn master switch "ON."
- (4) Turn ignition switch to "BOTH."
- (5) Open throttle 1/2" and engage starter.
- (6) Pull carburetor heat on after engine has started, and leave on until engine is running smoothly.

Without Preheat:

- (1) Prime the engine six to eight strokes while the propeller is being turned by hand with throttle open 1/2". Leave primer charged and ready for stroke.
- (2) Clear propeller.
- (3) Turn master switch "ON."
- (4) Turn ignition switch to "BOTH."
- (5) Pump throttle rapidly to full open twice. Return to 1/2" open position.

- (6) Engage starter and continue to prime engine until it is running smoothly, or alternately, pump throttle rapidly over first 1/4 of total travel.
- (7) Pull carburetor heat on after engine has started. Leave on until engine is running smoothly.
- (8) Lock primer.

NOTE

If the engine does not start during the first few attempts, or if engine firing diminishes in strength, it is probable that the spark plugs have been frosted over. Preheat must be used before another start is attempted.

IMPORTANT

Excessive priming and pumping throttle may cause raw fuel to accumulate in the intake air duct, creating a fire hazard in the event of a backfire. If this occurs, maintain a cranking action to suck flames into the engine. An outside attendant with a fire extinguisher is advised for cold starts without preheat.

OPERATION.

During cold weather operations, no indication will be apparent on the oil temperature gage prior to take-off if outside air temperatures are very cold. After a suitable warm-up period (2 to 5 minutes at 1000 RPM), accelerate the engine several times to higher engine RPM. If the engine accelerates smoothly and the oil pressure remains normal and steady, the airplane is ready for take-off.

Rough engine operation in cold weather can be caused by a combination of an inherently leaner mixture due to the dense air and poor vaporization and distribution of the fuel-air mixture to the cylinders. The effects of these conditions are especially noticeable during operation on one magneto in ground checks where only one spark plug fires in each cylinder.

To operate the engine without a winterization kit in occasional outside air temperatures from 10° to 20° F, the following procedure is recommended:

- (1) Use full carburetor heat during engine warm-up and ground check.
- (2) Use minimum carburetor heat required for smooth operation in take-off, climb, and cruise.
- (3) Select relatively high manifold pressure and RPM settings for optimum mixture distribution, and avoid excessive manual leaning in cruising flight.
- (4) Avoid sudden throttle movements during ground and flight operation.

When operating in sub-zero temperatures, avoid using partial carburetor heat. Partial heat may raise the carburetor air temperature to the 32° to 70° range where icing is critical under certain atmospheric conditions.

Refer to Section VI for cold weather equipment and operating details for the OIL DILUTION SYSTEM.

HOT WEATHER OPERATION.

The general warm temperature starting information on page 2-7 is appropriate. Avoid prolonged engine operation on the ground.

Section III

OPERATING LIMITATIONS

OPERATIONS AUTHORIZED.

Your Cessna exceeds the requirements for airworthiness as set forth by the United States Government, and is certificated under FAA Type Certificate No. 3A13 as Cessna Model No. 182L.

With standard equipment, the airplane is approved for day and night operation under VFR. Additional optional equipment is available to increase its utility and to make it authorized for use under IFR day and night. An owner of a properly equipped Cessna is eligible to obtain approval for its operation on single-engine scheduled airline service under VFR. Your Cessna Dealer will be happy to assist you in selecting equipment best suited to your needs.

MANEUVERS—NORMAL CATEGORY.

The airplane is certificated in the normal category. The normal category is applicable to airplanes intended for non-aerobatic operations. These include any maneuvers incidental to normal flying, stalls (except whip stalls) and turns in which the angle of bank is not more than 60°. In connection with the foregoing, the following gross weight and flight load factors apply:

Gross Weight	2800 lbs.
Flight Load Factor *Flaps Up	+3.8 -1.52
Flight Load Factor *Flaps Down	+3.5

*The design load factors are 150% of the above, and in all cases, the structure meets or exceeds design loads.

Your airplane must be operated in accordance with all FAA-approved markings, placards and check lists in the airplane. If there is any information in this section which contradicts the FAA-approved markings, placards and check lists, it is to be disregarded.

AIRSPEED LIMITATIONS.

The following are the certificated calibrated airspeed limits for your Cessna:

Never Exceed (Glide or dive, smooth air)	193 MPH (red line)
Caution Range	160-193 MPH (yellow arc)
Maximum Structural Cruising Speed	160 MPH (Level flight or climb)
Normal Operation Range.	67-160 MPH (green arc)
Maximum Speed, Flaps Extended	
Flaps 10°	160 MPH
Flaps 10° - 40°	110 MPH
Flap Operation Range	60-110 MPH (white arc)
Maneuvering Speed*	128 MPH

*The maximum speed at which abrupt control travel can be used without exceeding the design load factor.

ENGINE OPERATION LIMITATIONS.

Power and Speed 230 BHP at 2600 RPM

ENGINE INSTRUMENT MARKINGS.

OIL TEMPERATURE GAGE.

Normal Operating Range Green Arc
Do Not Exceed 225° F (red line)

OIL PRESSURE GAGE.

Idling Pressure 10 psi (red line)
Normal Operating Range 30-60 psi (green arc)
Maximum Pressure 100 psi (red line)

MANIFOLD PRESSURE GAGE.

Normal Operating Range 15-23 in. Hg (green arc)

CYLINDER HEAD TEMPERATURE GAGE.

Normal Operating Range 200-460° F (green arc)
Do Not Exceed 460° F (red line)

TACHOMETER.

Normal Operating Range 2200-2450 RPM (green arc)
Cautionary Range 2450-2600 RPM
Do Not Exceed (Engine rated speed) 2600 RPM (red line)

CARBURETOR AIR TEMPERATURE GAGE (OPT).

Under possible icing conditions:

Normal Operating Range 5° to 20°C (green arc)
Cautionary Range 0° to 5°C (yellow arc)
Icing Range -20° to 0°C (red arc)

FUEL QUANTITY INDICATORS.

Empty E (red line)
(2.5 gallons unusable each tank in normal flight maneuvers
with fuel selector valve on "BOTH. ")


WEIGHT AND BALANCE.


The following information will enable you to operate your Cessna within the prescribed weight and center of gravity limitations. To figure the weight and balance for your particular airplane, use the Sample Problem, Loading Graph, and Center of Gravity Moment Envelope as follows:

Take the licensed Empty Weight and Moment/1000 from the Weight and Balance Data sheet, plus any changes noted on forms FAA-337 carried in your airplane, and write them down in the proper columns. Using the Loading Graph, determine the moment/1000 of each item to be carried. Total the weights and moments/1000 and use the Center of Gravity Moment Envelope to determine whether the point falls within the envelope, and if the loading is acceptable.

SAMPLE LOADING PROBLEM	SAMPLE AIRPLANE		YOUR AIRPLANE	
	Weight (lbs.)	Moment (lb. - ins. /1000)	Weight (lbs.)	Moment (lb. - ins. /1000)
1. Licensed Empty Weight (Sample Airplane)	1672	59.4		
2. Oil (12 qts. - Full oil may be assumed for all flights.)	22	-0.3	22	-0.3
3. Pilot and Front Passenger.....	340	12.2		
4. Fuel (Standard-60 Gal at 6#/Gal).....	360	17.3		
Fuel (Long Range-79 Gal at 6#/Gal)				
5. Rear Passengers	340	24.1		
6. Baggage (or Passenger on Auxillary Seat).....	66	6.4		
7. TOTAL WEIGHT AND MOMENT.....	2800	119.1		

8. Locate this point (2800 at 119.1) on the center of gravity moment envelope, and since this point falls within the envelope the loading is acceptable.

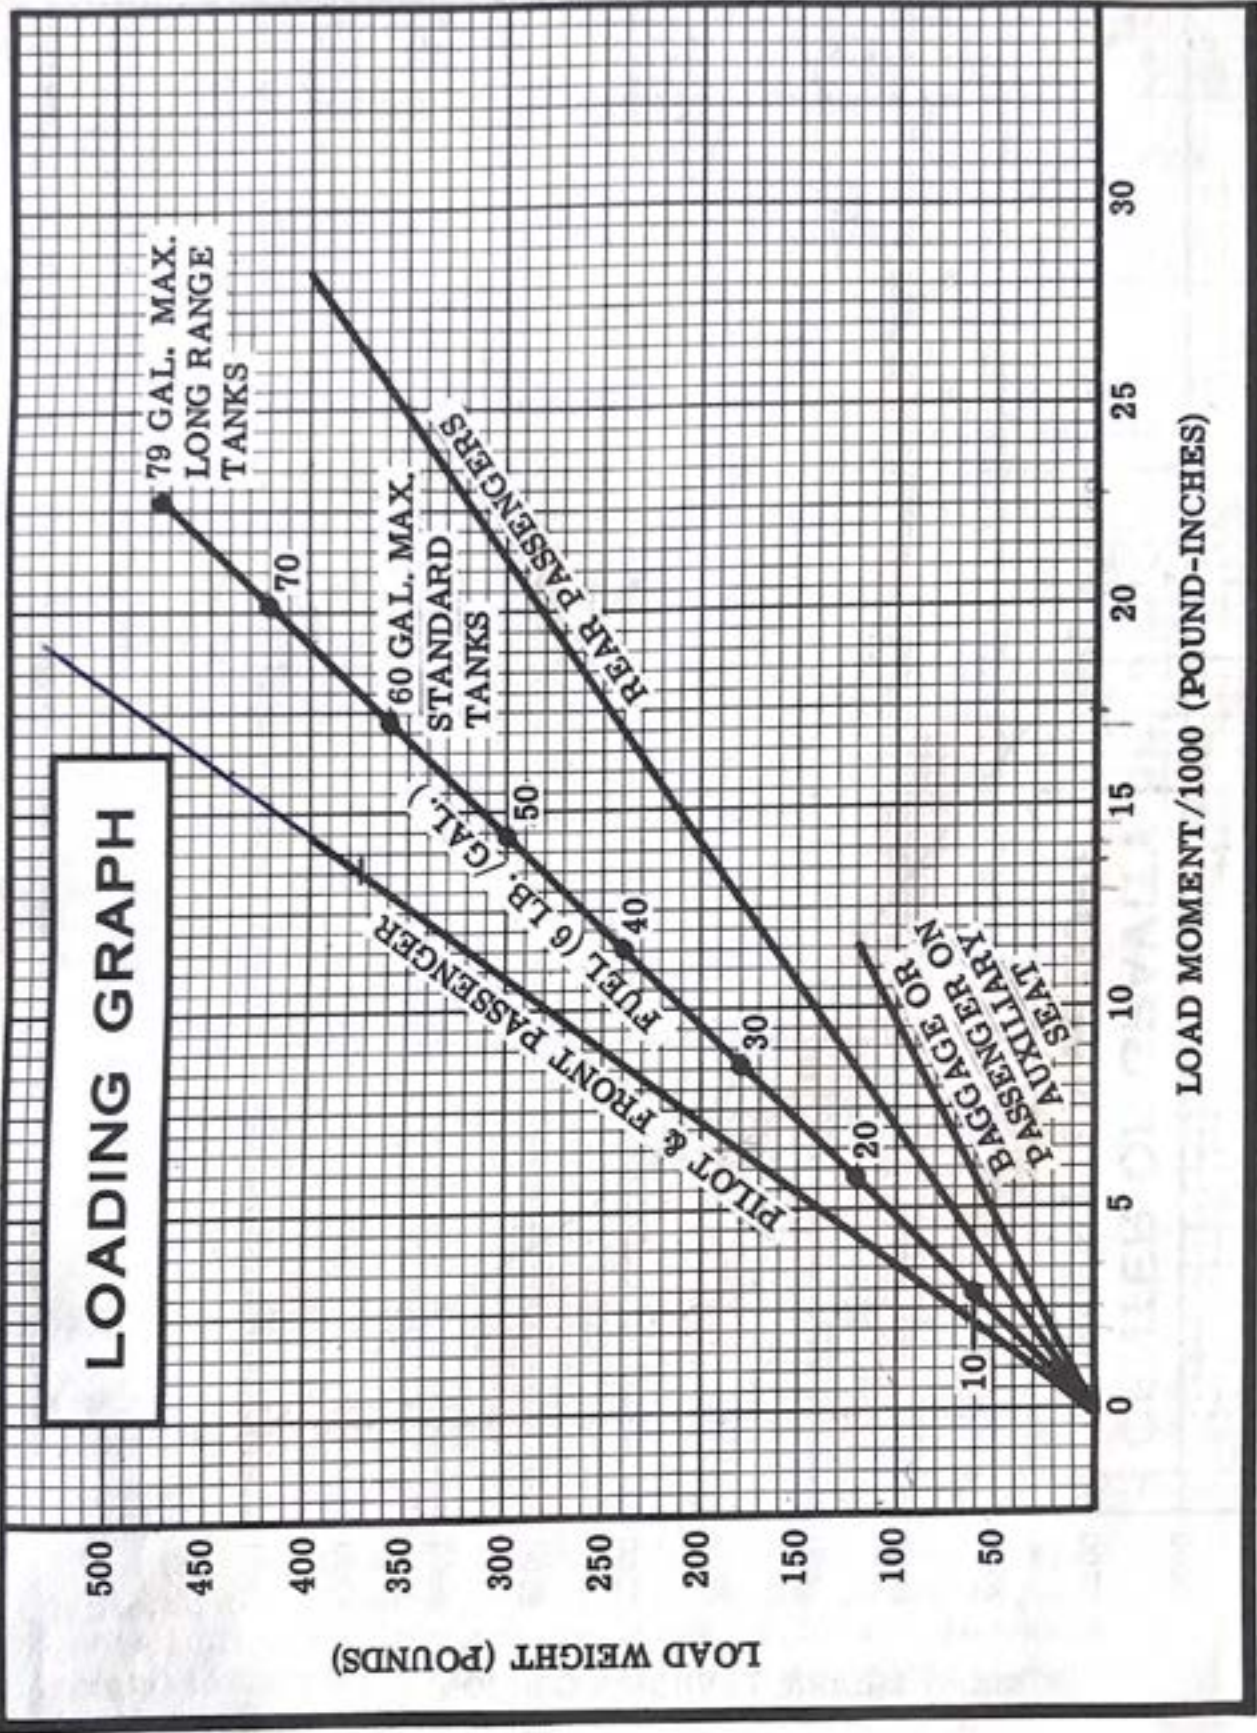

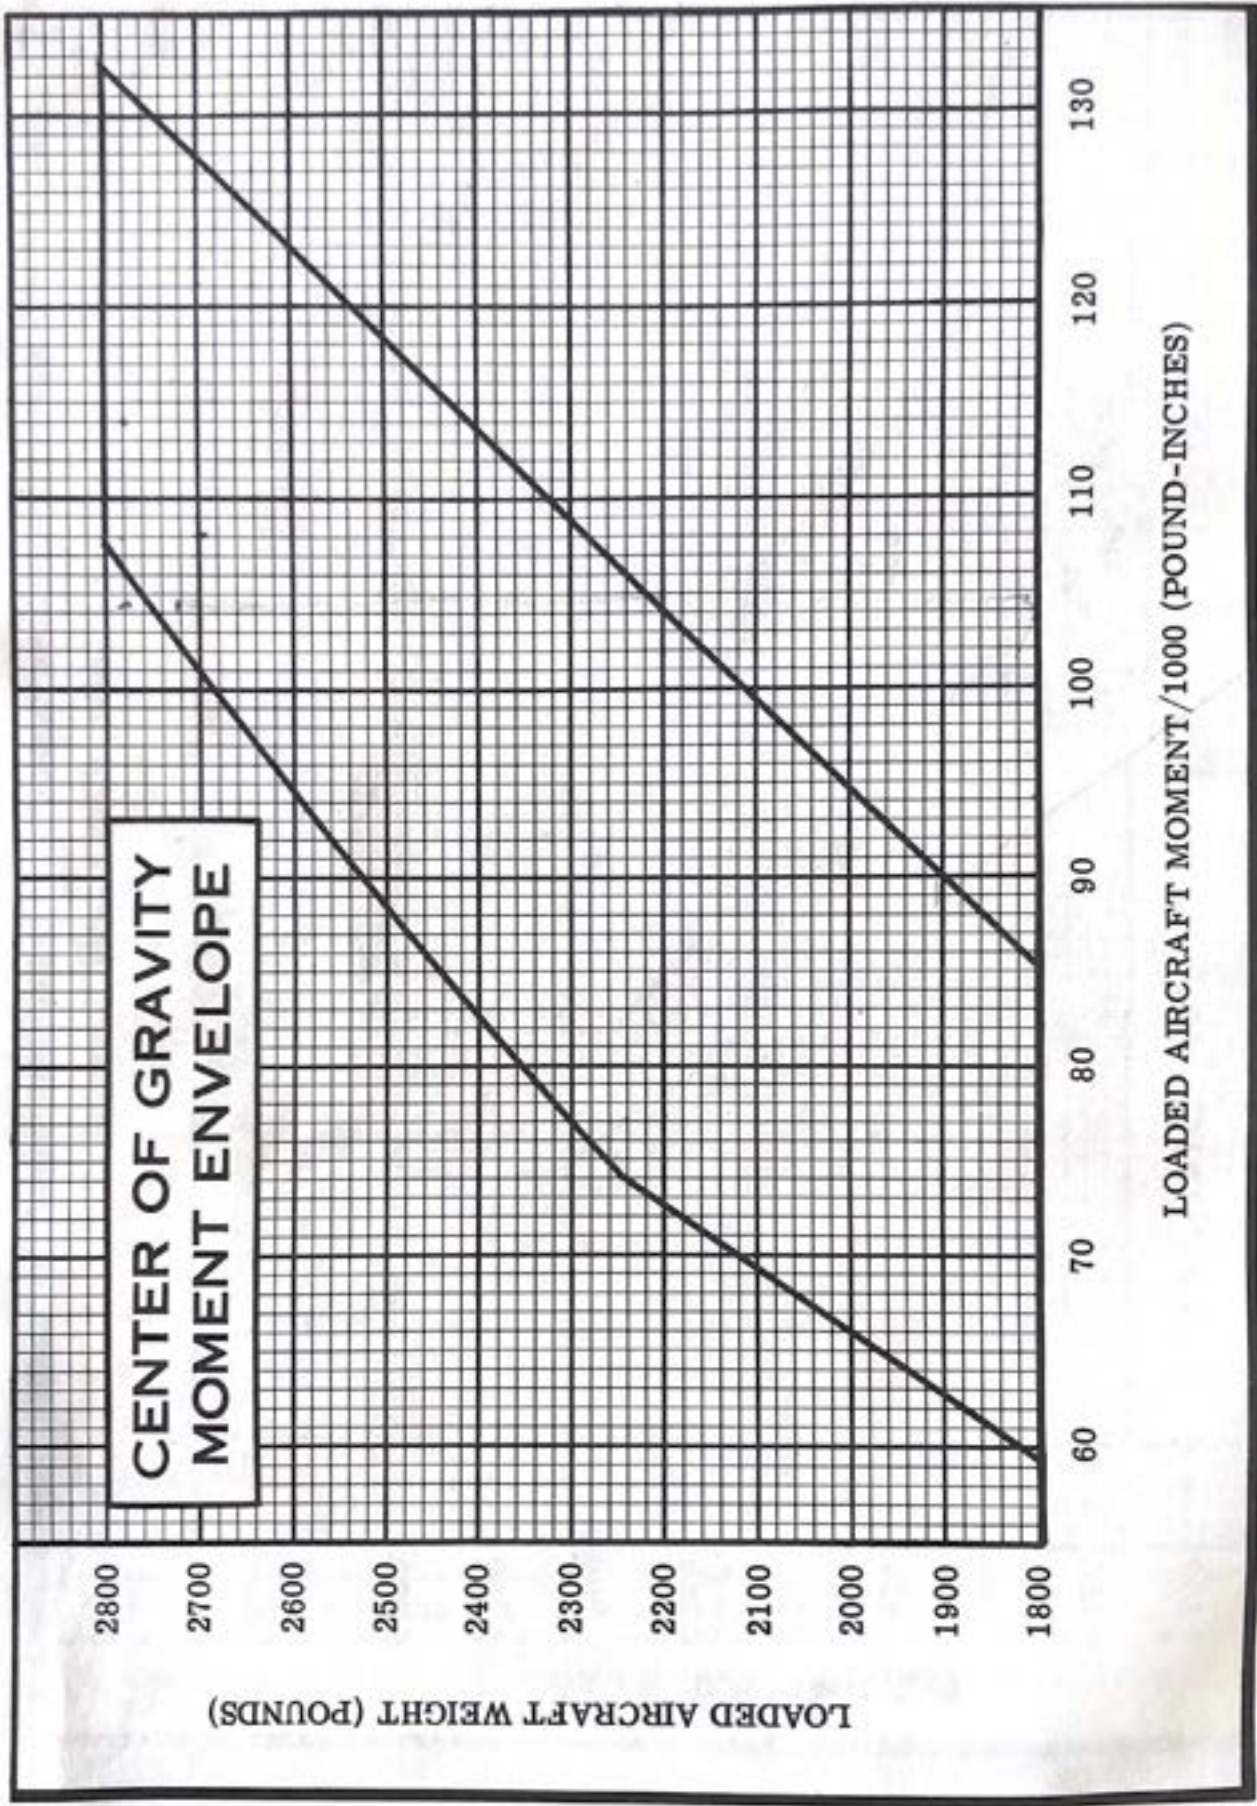

Section IV

CARE OF THE AIRPLANE

If your airplane is to retain that new-plane performance and dependability, certain inspection and maintenance requirements must be followed. It is wise to follow a planned schedule of lubrication and preventative maintenance based on climatic and flying conditions encountered in your locality.

Keep in touch with your Cessna Dealer, and take advantage of his knowledge and experience. He knows your airplane and how to maintain it. He will remind you when lubrications and oil changes are necessary, and about other seasonal and periodic services.

GROUND HANDLING.

The airplane is most easily and safely maneuvered during ground handling by a tow-bar attached to the nosewheel.

NOTE

When using the tow-bar, do not exceed the nosewheel turning angle of 29° either side of center.

MOORING YOUR AIRPLANE.

Proper tie-down procedure is your best precaution against damage to your parked airplane by gusty or strong winds. To tie down your airplane securely, proceed as follows:

- (1) Set the parking brake and install the control wheel lock.
- (2) Install a surface control lock over the fin and rudder.
- (3) Tie sufficiently strong ropes or chains (700 pounds tensile strength) to the wing, tail, and nose tie-down fittings and secure each rope to a ramp tie-down.
- (4) Install a pitot tube cover.

WINDSHIELD-WINDOWS.

The plastic windshield and windows should be cleaned with an aircraft windshield cleaner. Apply the cleaner sparingly with soft cloths, and rub with moderate pressure until all dirt, oil scum and bug stains are removed. Allow the cleaner to dry, then wipe it off with soft flannel cloths.

If a windshield cleaner is not available, the plastic can be cleaned with soft cloths moistened with Stoddard solvent to remove oil and grease.

NOTE

Never use gasoline, benzine, alcohol, acetone, carbon tetrachloride, fire extinguisher or anti-ice fluid, lacquer thinner or glass cleaner to clean the plastic. These materials will attack the plastic and may cause it to craze.

Follow by carefully washing with a mild detergent and plenty of water. Rinse thoroughly, then dry with a clean moist chamois. Do not rub the plastic with a dry cloth since this builds up an electrostatic charge which attracts dust. Waxing with a good commercial wax will finish the cleaning job. A thin, even coat of wax, polished out by hand with clean soft flannel cloths, will fill in minor scratches and help prevent further scratching.

Do not use a canvas cover on the windshield unless freezing rain or sleet is anticipated since the cover may scratch the plastic surface.

ALUMINUM SURFACES.

The clad aluminum surfaces of your Cessna may be washed with clear water to remove dirt; oil and grease may be removed with gasoline, naphtha, carbon tetrachloride or other non-alkaline solvents. Dulled aluminum surfaces may be cleaned effectively with an aircraft aluminum polish.

After cleaning, and periodically thereafter, waxing with a good automotive wax will preserve the bright appearance and retard corrosion. Regular waxing is especially recommended for airplanes operated in salt water areas as a protection against corrosion.

PAINTED SURFACES.

The painted exterior surfaces of your new Cessna have a durable, long lasting finish and, under normal conditions, require no polishing or buffing. Approximately 15 days are required for the paint to cure completely; in most cases, the curing period will have been completed prior to delivery of the airplane. In the event that polishing or buffing is required within the curing period, it is recommended that the work be done by someone experienced in handling uncured paint. Any Cessna Dealer can accomplish this work.

Generally, the painted surfaces can be kept bright by washing with water and mild soap, followed by a rinse with water and drying with cloths or a chamois. Harsh or abrasive soaps or detergents which cause corrosion or make scratches should never be used. Remove stubborn oil and grease with a cloth moistened with Stoddard solvent.

Waxing is unnecessary to keep the painted surfaces bright. However, if desired, the airplane may be waxed with a good automotive wax. A heavier coating of wax on the leading edges of the wings and tail and on the engine nose cap and propeller spinner will help reduce the abrasion encountered in these areas.

PROPELLER CARE.

Preflight inspection of propeller blades for nicks, and wiping them occasionally with an oily cloth to clean off grass and bug stains will assure long, trouble-free service. It is vital that small nicks on the propeller, particularly near the tips and on the leading edges, are dressed out as soon as possible since these nicks produce stress concentrations, and if ignored, may result in cracks. Never use an alkaline cleaner on the blades; remove grease and dirt with carbon tetrachloride or Stoddard solvent.

INTERIOR CARE.

To remove dust and loose dirt from the upholstery and carpet, clean the interior regularly with a vacuum cleaner.

Blot up any spilled liquid promptly with cleansing tissue or rags. Don't pat the spot; press the blotting material firmly and hold it for

several seconds. Continue blotting until no more liquid is taken up. Scrape off sticky materials with a dull knife, then spot-clean the area.

Oily spots may be cleaned with household spot removers, used sparingly. Before using any solvent, read the instructions on the container and test it on an obscure place on the fabric to be cleaned. Never saturate the fabric with a volatile solvent; it may damage the padding and backing materials.

Soiled upholstery and carpet may be cleaned with a foam-type detergent, used according to the manufacturer's instructions. Keep the foam as dry as possible and remove it with a vacuum cleaner, to minimize wetting the fabric.

The plastic trim, headliner, instrument panel and control knobs need only be wiped off with a damp cloth. Oil and grease on the control wheel and control knobs can be removed with a cloth moistened with Stoddard solvent. Volatile solvents, such as mentioned in paragraphs on care of the windshield, must never be used since they soften and craze the plastic.

INSPECTION SERVICE AND INSPECTION PERIODS.

With your airplane you will receive an Owner's Service Policy. Coupons attached to the policy entitle you to an initial inspection and the first 100-hour inspection at no charge. If you take delivery from your Dealer, he will perform the initial inspection before delivery of the airplane to you. If you pick up the airplane at the factory, plan to take it to your Dealer reasonably soon after you take delivery on it. This will permit him to check it over and to make any minor adjustments that may appear necessary. Also, plan an inspection by your Dealer at 100 hours or 180 days, whichever comes first. This inspection also is performed by your Dealer for you at no charge. While these important inspections will be performed for you by any Cessna Dealer, in most cases you will prefer to have the Dealer from whom you purchased the airplane accomplish this work.

Federal Aviation Regulations require that all airplanes have a periodic (annual) inspection as prescribed by the administrator, and performed by a person designated by the administrator. In addition, 100-hour periodic inspections made by an "appropriately-rated mechanic" are required if the airplane is flown for hire. The Cessna Aircraft

Company recommends the 100-hour periodic inspection for your airplane. The procedure for this 100-hour inspection has been carefully worked out by the factory and is followed by the Cessna Dealer Organization. The complete familiarity of the Cessna Dealer Organization with Cessna equipment and with factory-approved procedures provides the highest type of service possible at lower cost.

AIRCRAFT FILE.

There are miscellaneous data, information and licenses that are a part of the aircraft file. The following is a check list for that file. In addition, a periodic check should be made of the latest Federal Aviation Regulations to insure that all data requirements are met.

A. To be displayed in the aircraft at all times:

- (1) Aircraft Airworthiness Certificate (Form FAA-1362B).
- (2) Aircraft Registration Certificate (Form FAA-500A).
- (3) Aircraft Radio Station License (Form FCC-404, if transmitter installed).

B. To be carried in the aircraft at all times:

- (1) Weight and Balance, and associated papers (latest copy of the Repair and Alteration Form, Form-337, if applicable).
- (2) Aircraft Equipment List.

C. To be made available upon request:

- (1) Aircraft Log Book.
- (2) Engine Log Book.

NOTE

Cessna recommends that these items, plus the Owner's Manual, "Cessna Flight Guide" (Flight Computer), and Service Policies, be carried in the aircraft at all times.

Most of the items listed are required by the United States Federal Aviation Regulations. Since the regulations of other nations may require other documents and data, owners of exported aircraft should check with their own aviation officials to determine their individual requirements.

LUBRICATION AND SERVICING PROCEDURES

Specific servicing information is provided here for items requiring daily attention. A Servicing Intervals Check List is included to inform the pilot when to have other items checked and serviced.

DAILY

FUEL TANK FILLERS:

Service after each flight with 80/87 minimum grade fuel. The capacity of each tank is 32.5 gallons. When optional long range fuel tanks are installed, the capacity of each tank is 42.0 gallons.

FUEL STRAINER:

On first flight of day and after each refueling, pull out strainer drain knob for about four seconds to clear fuel strainer of possible water and sediment. Check strainer drain closed. If water is observed, there is a possibility that the wing tank sumps contain water. Thus, the wing tank sump drain plugs and fuel line drain plug should be removed to check for the presence of water.

OIL FILLER:

When preflight check shows low oil level, service with aviation grade engine oil; SAE 50 above 40°F and SAE 10W30 or SAE 30 below 40°F. (Multi-viscosity oil with a range of SAE 10W30 is recommended for improved starting in cold weather.) Detergent or dispersant oil, conforming to Continental Motors Specification MHS-24A, must be used. Your Cessna Dealer can supply approved brands of oil.

NOTE

To promote faster ring seating and improved oil control, your Cessna was delivered from the factory with straight mineral oil (non-detergent). This "break-in" oil should be used only for the first 20 to 30 hours of operation, at which time it must be replaced with detergent oil.

LUBRICATION AND SERVICING PROCEDURES

DAILY (Continued)

OIL DIPSTICK:

Check oil level before each flight. Do not operate on less than 9 quarts. To minimize loss of oil through breather, fill to 10 quart level for normal flights of less than 3 hours. For extended flight, fill to 12 quarts. If optional oil filter is installed, one additional quart is required when the filter element is changed.

OXYGEN CYLINDER AND FILLER VALVE (OPT):

Check oxygen pressure gage for anticipated requirements before each flight. Use filler valve on left side of rear baggage compartment wall to refill cylinder with aviator's breathing oxygen (Spec. No. MIL-O-27210). Maximum pressure (cylinder temperature stabilized after filling), 1800 psi at 70°F. Refer to page 6-9 for filling pressures.

SERVICING INTERVALS CHECK LIST

EACH 50 HOURS

BATTERY -- Check and service. Check oftener (at least every 30 days) if operating in hot weather.

ENGINE OIL AND OIL FILTER -- Change engine oil and replace filter element. If optional oil filter is not installed, change oil and clean screen every 25 hours. Change engine oil at least every four months even though less than 50 hours have been accumulated. Reduce periods for prolonged operation in dusty areas, cold climates, or when short flights and long idle periods result in sludging conditions.

NOTE

After first 20 to 30 hours of engine operation, an initial oil change should be made to remove "break-in" oil and change the filter, if installed.

CARBURETOR AIR FILTER -- Clean or replace. Under extremely dusty conditions, daily maintenance of the filter is recommended.

NOSE GEAR TORQUE LINKS -- Lubricate. When operating under dusty conditions, more frequent lubrication is recommended.

SHIMMY DAMPENER -- Refer to Service Manual for detailed instructions on checking and filling.

EACH 100 HOURS

FUEL STRAINER -- Disassemble and clean.

FUEL TANK SUMP DRAIN PLUGS -- Remove and drain.

FUEL LINE DRAIN PLUG -- Remove and drain.

BRAKE MASTER CYLINDERS -- Check and fill.

VACUUM SYSTEM OIL SEPARATOR (OPT) -- Clean.

SUCTION RELIEF VALVE INLET SCREEN (OPT) -- Clean.

SPARK PLUGS -- Clean, test and regap.

SERVICING INTERVALS CHECK LIST

(Continued)

EACH 500 HOURS

WHEEL BEARINGS -- Lubricate at first 100 hours and at 500 hours thereafter. Reduce lubrication interval to 100 hours when operating in dusty or seacoast areas, during periods of extensive taxiing, or when numerous take-offs and landings are made.

VACUUM SYSTEM AIR FILTER (OPT) -- Replace filter element. Replace sooner if suction gage reading drops to 4.6 in. Hg.

AS REQUIRED

NOSE GEAR SHOCK STRUT -- Keep filled with fluid and inflated to 55-60 psi.

OWNER FOLLOW-UP SYSTEM

Your Cessna Dealer has an owner follow-up system to notify you when he receives information that applies to your Cessna. In addition, if you wish, you may choose to receive similar notification directly from the Cessna Service Department. A subscription card is supplied in your aircraft file for your use, should you choose to request this service. Your Cessna Dealer will be glad to supply you with details concerning these follow-up programs, and stands ready through his Service Department to supply you with fast, efficient, low cost service.

PUBLICATIONS

Included in your aircraft file are various manuals which describe the operation of the equipment in your aircraft. These manuals, plus many other supplies that are applicable to your aircraft, are available from your Cessna Dealer, and, for your convenience, are listed below.

- OWNER'S MANUALS FOR YOUR
AIRCRAFT
ELECTRONICS - 300 AND 400 SERIES
AUTOPILOT - NAV-O-MATIC 300 AND 400
- SERVICE MANUALS AND PARTS CATALOGS FOR YOUR
AIRCRAFT
ENGINE AND ACCESSORIES
ELECTRONICS - 300 AND 400 SERIES
AUTOPILOT - NAV-O-MATIC 300 AND 400
WING LEVELER
- COMPUTERS
- SALES AND SERVICE DEALER DIRECTORY
- DO'S AND DON'TS ENGINE BOOKLET

Your Cessna Dealer has a current catalog of all Customer Services Supplies that are available, many of which he keeps on hand. Supplies which are not in stock, he will be happy to order for you.

Section V

OPERATIONAL DATA

The operational data charts on the following pages are presented for two purposes; first, so that you may know what to expect from your airplane under various conditions, and second, to enable you to plan your flights in detail and with reasonable accuracy.




The data in the charts has been compiled from actual flight tests with the airplane and engine in good condition and using average piloting techniques. Note also that the range charts make no allowances for wind, navigational errors, warm-up, take-off, climb, etc. You must estimate these variables for yourself and make allowances accordingly.

Remember that the charts contained herein are based on standard day conditions. For more precise power, fuel consumption, and endurance information, consult the Cessna Flight Guide (Power Computer) supplied with your aircraft. With the Flight Guide, you can easily take into account temperature variations from standard at any flight altitude.

AIRSPEED CORRECTION TABLE									
FLAPS UP	IAS	60	80	100	120	140	160	180	—
	CAS	68	83	100	118	137	156	175	—
*FLAPS DOWN 20°-40°	IAS	40	50	60	70	80	90	100	110
	CAS	58	63	68	75	84	92	101	110

***Maximum Flap Speed 110 MPH, CAS**

Figure 5-1.

STALL SPEED, POWER OFF			
<i>Gross Weight</i> 2800 LBS.	ANGLE OF BANK		
	 0°	 30°	 60°
CONFIGURATION			
FLAPS UP	64	69	91
FLAPS 20°	57	61	81
FLAPS 40°	55	59	78

SPEEDS ARE MPH, CAS

Figure 5-2.

WIND CORRECTION TABLE

WIND DIRECTION	WIND VELOCITY	WIND CORRECTION	WIND CORRECTION	WIND CORRECTION	WIND CORRECTION	WIND CORRECTION	WIND CORRECTION	WIND CORRECTION	WIND CORRECTION
000	00	00	00	00	00	00	00	00	00
010	05	05	05	05	05	05	05	05	05
020	10	10	10	10	10	10	10	10	10
030	15	15	15	15	15	15	15	15	15
040	20	20	20	20	20	20	20	20	20
050	25	25	25	25	25	25	25	25	25
060	30	30	30	30	30	30	30	30	30
070	35	35	35	35	35	35	35	35	35
080	40	40	40	40	40	40	40	40	40
090	45	45	45	45	45	45	45	45	45
100	50	50	50	50	50	50	50	50	50
110	55	55	55	55	55	55	55	55	55
120	60	60	60	60	60	60	60	60	60
130	65	65	65	65	65	65	65	65	65
140	70	70	70	70	70	70	70	70	70
150	75	75	75	75	75	75	75	75	75
160	80	80	80	80	80	80	80	80	80
170	85	85	85	85	85	85	85	85	85
180	90	90	90	90	90	90	90	90	90
190	95	95	95	95	95	95	95	95	95
200	100	100	100	100	100	100	100	100	100
210	105	105	105	105	105	105	105	105	105
220	110	110	110	110	110	110	110	110	110
230	115	115	115	115	115	115	115	115	115
240	120	120	120	120	120	120	120	120	120
250	125	125	125	125	125	125	125	125	125
260	130	130	130	130	130	130	130	130	130
270	135	135	135	135	135	135	135	135	135
280	140	140	140	140	140	140	140	140	140
290	145	145	145	145	145	145	145	145	145
300	150	150	150	150	150	150	150	150	150

TAKE-OFF DATA

TAKE-OFF DISTANCE WITH 20° FLAPS FROM HARD SURFACE RUNWAY.

GROSS WEIGHT LBS.	IAS @ 50' MPH	HEAD WIND MPH	AT SEA LEVEL & 59°F.			AT 2500 FT. & 50°F.			AT 5000 FT. & 41°F.			AT 7500 FT. & 32°F.		
			GROUND RUN	TOTAL TO CLEAR 50' OBS	GROUND RUN	TOTAL TO CLEAR 50' OBS	GROUND RUN	TOTAL TO CLEAR 50' OBS	GROUND RUN	TOTAL TO CLEAR 50' OBS				
2800	61	0	625	1205	745	1420	895	1695	1095	2090				
		15	380	830	460	990	565	1200	700	1505				
		30	190	515	240	630	305	780	390	1000				
2400	57	0	440	895	525	1035	630	1210	765	1460				
		15	255	600	310	705	380	835	470	1020				
		30	115	355	150	425	190	515	245	645				
2000	52	0	295	655	350	745	415	855	500	1005				
		15	160	425	195	490	235	570	290	680				
		30	65	235	80	280	105	335	135	405				

- NOTES: 1. Increase distances 10% for each 25°F above standard temperature for particular altitude.
 2. For operation on a dry, grass runway, increase distances (both "ground run" and "total to clear 50 ft. obstacle") by 7% of the "total to clear 50 ft. obstacle" figure.

MAXIMUM RATE-OF-CLIMB DATA

GROSS WEIGHT LBS.	AT SEA LEVEL & 59°F.			AT 5000 FT. & 41°F.			AT 10,000 FT. & 23°F.			AT 15,000 FT. & 5°F.			AT 20,000 FT. & -12°F.		
	IAS MPH	RATE OF CLIMB FT/MIN	GAL. OF FUEL USED	IAS MPH	RATE OF CLIMB FT/MIN	From SL FUEL USED	IAS MPH	RATE OF CLIMB FT/MIN	From SL FUEL USED	IAS MPH	RATE OF CLIMB FT/MIN	From SL FUEL USED	IAS MPH	RATE OF CLIMB FT/MIN	From SL FUEL USED
2800	88	980	1.5	86	745	3.7	84	510	6.3	82	280	10.2	80	50	20.5
2400	86	1295	1.5	84	1005	3.1	82	720	5.0	79	435	7.6	77	150	12.9
2000	84	1710	1.5	82	1350	2.7	79	995	4.1	76	640	5.9	74	280	9.2

- NOTES: 1. Flaps up, full throttle, 2600 RPM, mixture leaned for smooth operation above 5000 ft.
 2. Fuel used includes warm-up and take-off allowance.
 3. For hot weather, decrease rate of climb 30 ft./min. for each 10°F above standard day temperature for particular altitude.

Figure 5-3.

CRUISE PERFORMANCE

LEAN MIXTURE

Standard Conditions \ Zero Wind \ Gross Weight- 2800 Pounds

RPM	MP	% BHP	GAL/HOUR	TAS MPH	60 GAL (NO RESERVE)		79 GAL (NO RESERVE)	
					ENDR. HOURS	RANGE MILES	ENDR. HOURS	RANGE MILES
2500 FEET								
2450	23	76	14.2	158	4.2	670	5.6	885
	22	72	13.4	154	4.5	690	5.9	910
	21	68	12.7	151	4.7	715	6.2	940
	20	63	12.0	148	5.0	730	6.6	965
2300	23	71	13.1	154	4.6	700	6.0	925
	22	67	12.2	149	4.9	740	6.5	970
	21	62	11.5	145	5.2	760	6.9	1005
	20	59	11.0	142	5.5	775	7.2	1020
2200	23	67	12.1	149	5.0	745	6.5	980
	22	63	11.4	146	5.3	770	6.9	1010
	21	59	10.8	142	5.6	790	7.3	1040
	20	55	10.2	138	5.9	810	7.7	1065
2000 MAXIMUM RANGE SETTINGS	20	47	8.7	126	6.9	865	9.1	1135
	19	43	8.2	121	7.3	890	9.6	1170
	18	39	7.5	113	8.0	900	10.5	1185
	17	35	7.0	105	8.6	905	11.3	1190
5000 FEET								
2450	23	78	14.5	163	4.1	670	5.4	885
	22	73	13.6	159	4.4	700	5.8	925
	21	70	13.0	156	4.6	720	6.1	950
	20	65	12.2	151	4.9	750	6.5	985
2300	23	73	13.4	158	4.5	710	5.9	930
	22	69	12.6	155	4.7	730	6.3	965
	21	64	11.9	151	5.0	760	6.6	1005
	20	60	11.2	146	5.4	785	7.1	1035
2200	23	68	12.4	155	4.8	750	6.4	985
	22	64	11.7	151	5.1	775	6.8	1020
	21	60	11.0	146	5.5	800	7.2	1050
	20	57	10.5	143	5.7	815	7.5	1075
2000 MAXIMUM RANGE SETTINGS	19	45	8.5	126	7.1	895	9.3	1175
	18	41	7.9	118	7.6	905	10.0	1190
	17	37	7.3	111	8.2	910	10.8	1200
	16	34	6.8	103	8.8	905	11.6	1190

Figure 5-4 (Sheet 1 of 3).

CRUISE PERFORMANCE

LEAN MIXTURE

Standard Conditions \setminus Zero Wind \setminus Gross Weight- 2800 Pounds

RPM	MP	% BHP	GAL/ HOUR	TAS MPH	60 GAL (NO RESERVE)		79 GAL (NO RESERVE)	
					ENDR. HOURS	RANGE MILES	ENDR. HOURS	RANGE MILES
7500 FEET								
2450	21	71	13.1	161	4.6	730	6.0	960
	20	67	12.4	157	4.8	760	6.4	1005
	19	62	11.7	152	5.1	780	6.8	1025
	18	58	11.0	147	5.5	805	7.2	1055
2300	21	66	12.2	156	4.9	760	6.5	1005
	20	62	11.6	151	5.2	780	6.8	1025
	19	58	11.0	147	5.5	800	7.2	1050
	18	54	10.5	142	5.7	810	7.5	1065
2200	21	62	11.4	152	5.3	805	6.9	1055
	20	58	10.7	148	5.6	830	7.4	1090
	19	54	10.2	143	5.9	840	7.7	1105
	18	51	9.7	138	6.2	860	8.1	1130
2000 MAXIMUM RANGE SETTINGS	19	47	8.7	131	6.9	900	9.1	1185
	18	43	8.1	123	7.4	910	9.8	1200
	17	39	7.6	116	7.9	920	10.4	1210
	16	36	7.0	107	8.6	920	11.3	1210
10,000 FEET								
2450	19	63	11.9	156	5.0	785	6.6	1035
	18	60	11.2	152	5.3	810	7.1	1065
	17	55	10.6	146	5.7	830	7.5	1090
	16	51	10.0	141	6.0	840	7.9	1105
2300	19	60	11.1	152	5.4	820	7.1	1080
	18	56	10.5	147	5.7	840	7.5	1105
	17	51	9.8	141	6.1	860	8.1	1130
	16	47	9.2	134	6.5	870	8.6	1145
2200	19	56	10.4	148	5.7	850	7.6	1120
	18	52	9.8	142	6.1	875	8.1	1155
	17	49	9.3	136	6.5	880	8.5	1160
	16	45	8.7	129	6.9	895	9.1	1175
2000 MAXIMUM RANGE SETTINGS	18	44	8.4	128	7.1	910	9.4	1200
	17	40	7.8	120	7.7	925	10.1	1215
	16	38	7.4	114	8.1	925	10.7	1215
	15	35	6.9	105	8.7	910	11.4	1200

Figure 5-4 (Sheet 2 of 3).

CRUISE PERFORMANCE

LEAN MIXTURE

Standard Conditions \ Zero Wind \ Gross Weight-2800 Pounds

RPM	MP	% BHP	GAL/HOUR	TAS MPH	60 GAL (NO RESERVE)		79 GAL (NO RESERVE)	
					ENDR. HOURS	RANGE MILES	ENDR. HOURS	RANGE MILES
15,000 FEET								
2450	16	54	10.4	150	5.8	865	7.6	1135
	15	50	9.8	142	6.1	875	8.1	1155
	14	46	9.2	135	6.5	880	8.6	1160
2300	16	50	9.6	143	6.2	890	8.2	1170
	15	47	9.1	136	6.6	900	8.7	1185
	14	42	8.5	127	7.1	900	9.3	1185
2200	16	47	9.1	138	6.6	910	8.7	1200
	15	44	8.6	130	7.0	910	9.2	1200
	14	40	8.0	120	7.5	905	9.9	1190
2000 MAXIMUM RANGE SETTINGS	16	40	7.8	122	7.7	940	10.1	1240
	15	37	7.3	112	8.2	920	10.8	1210
	14	34	6.8	101	8.8	895	11.6	1175
20,000 FEET								
2450	13	44	9.0	133	6.7	895	8.8	1175
	12	40	8.3	122	7.2	875	9.5	1155
2300	13	42	8.4	126	7.1	905	9.4	1190
	12	38	7.7	113	7.8	875	10.3	1155
2200	13	39	7.8	118	7.7	905	10.1	1190
	12	35	7.2	103	8.3	865	11.0	1135

Figure 5-4 (Sheet 3 of 3).

LANDING DISTANCE TABLE

LANDING DISTANCE WITH 40° FLAPS ON HARD SURFACED RUNWAY

GROSS WEIGHT POUNDS	APPROACH IAS MPH	@ SEA LEVEL & 59° F		@ 2500 FEET & 50° F		@ 5000 FEET & 41° F		@ 7500 FEET & 32° F	
		GROUND ROLL	TOTAL TO CLEAR 50 FT. OBS.	GROUND ROLL	TOTAL TO CLEAR 50 FT. OBS.	GROUND ROLL	TOTAL TO CLEAR 50 FT. OBS.	GROUND ROLL	TOTAL TO CLEAR 50 FT. OBS.
2800	69	590	1350	640	1430	680	1505	740	1595

- NOTES:
1. Distances shown are based on zero wind, power off and heavy braking.
 2. Reduce landing distances 10% for each 6 MPH headwind.
 3. For operation on a dry, grass runway, increase distances (both "ground roll" and "total to clear 50 ft. obstacle") by 20% of the "total to clear 50 ft. obstacle" figure.

Figure 5-5.

MAXIMUM GLIDE

- SPEED 80 MPH (IAS) —
- PROPELLER WINDMILLING
- FLAPS UP ● ZERO WIND

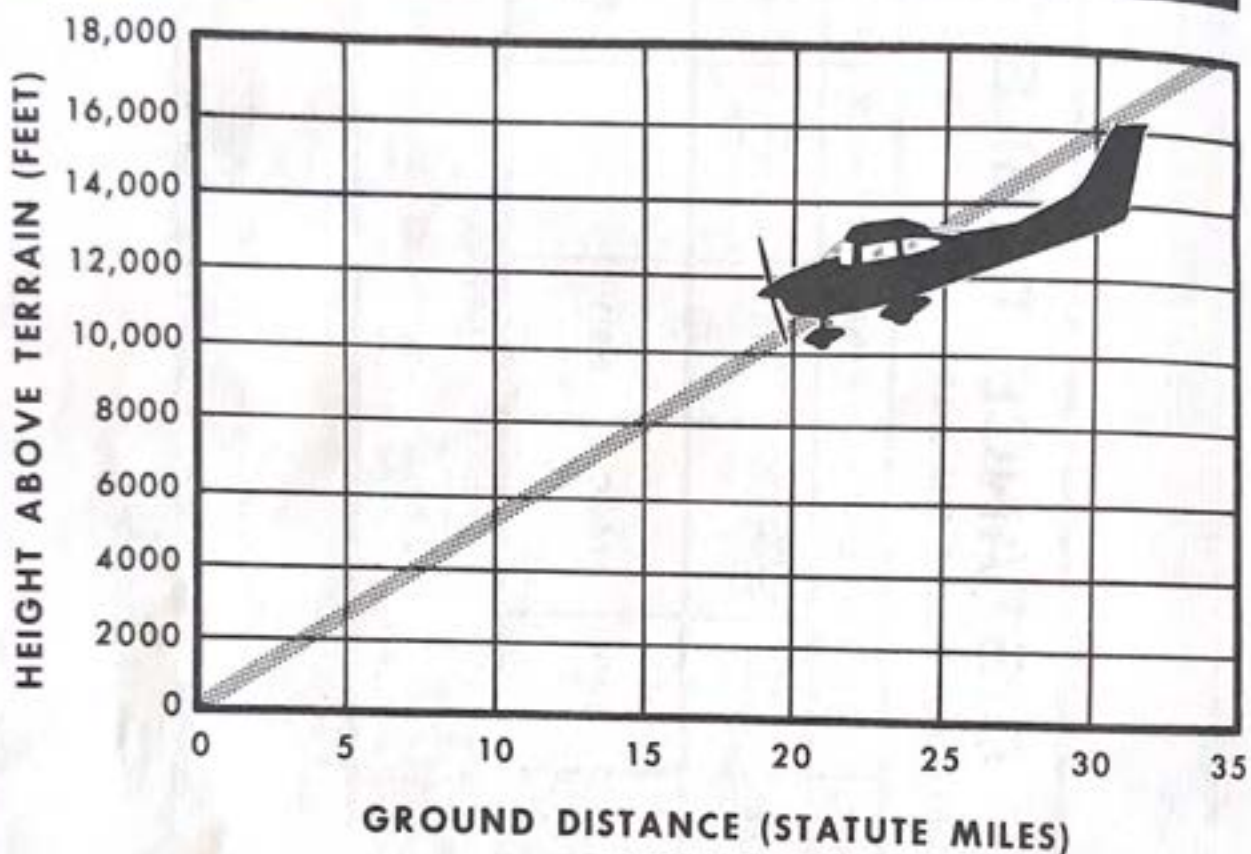


Figure 5-6.

OPTIONAL SYSTEMS

This section contains a description, operating procedures, and performance data (when applicable) for some of the optional equipment which may be installed in your Cessna. Owner's Manual Supplements are provided to cover operation of other optional equipment systems when installed in your airplane. Contact your Cessna Dealer for a complete list of available optional equipment.

LONG RANGE FUEL TANKS

Special wings with long range fuel tanks are available to replace the standard wings and fuel tanks for greater endurance and range. When these tanks are installed, the total usable fuel, for all flight conditions, is 79 gallons.

COLD WEATHER EQUIPMENT

WINTERIZATION KIT AND NON-CONGEALING OIL COOLER.

For continuous operation in temperatures consistently below 20°F, the Cessna winterization kit and non-congealing oil cooler should be installed to improve engine operation. The winterization kit consists of two shields to partially cover the cowl nose cap opening, one shield to cover the carburetor air intake, and insulation for the crankcase breather line. The non-congealing oil cooler replaces the standard oil cooler and provides improved oil flow through the cooler in cold weather.

GROUND SERVICE PLUG RECEPTACLE.

A ground service plug receptacle may be installed to permit use of an external power source for cold weather starting and during lengthy maintenance work on the airplane electrical system (with the exception of electronic equipment).

NOTE

Electrical power for the airplane electrical circuits is provided through a split bus bar having all electronic circuits on one side of the bus and other electrical circuits on the other side of the bus. When an external power source is connected, a contactor automatically opens the circuit to the electronic portion of the split bus bar as a protection against damage to the semi-conductors in the electronic equipment by transient voltages from the power source. Therefore, the external power source can not be used as a source of power when checking electronic components.

Just before connecting an external power source (generator type or battery cart), the master switch should be turned "ON."

The ground service plug receptacle circuit incorporates a polarity reversal protection. Power from the external power source will flow only if the ground service plug is correctly connected to the airplane. If the plug is accidentally connected backwards, no power will flow to the airplane's electrical system, thereby preventing any damage to electrical equipment.

The battery and external power circuits have been designed to completely eliminate the need to "jumper" across the battery contactor to close it for charging a completely "dead" battery. A special fused circuit in the external power system supplies the needed "jumper" across the contacts so that with a "dead" battery and an external power source applied, turning the master switch "ON" will close the battery contactor.

OIL DILUTION SYSTEM.

If your airplane is equipped with oil dilution, and very low temperatures are anticipated, dilute oil prior to engine shutdown by energizing the oil dilution switch with the engine operating at 1000 RPM. (Refer to figure 6-1 for dilution time for the anticipated temperature.) While diluting oil, the oil pressure should be watched for any unusual fluctuations that might indicate a screen being clogged with sludge washed down by the fuel.

OIL DILUTION TABLE			
— TEMPERATURE —			
	0°F	-10°F	-20°F
Dilution Time	1½ min.	3¾ min.	6 min.
Fuel Added	1 qt.	2½ qt.	4 qt.

NOTE: Maximum fuel and oil in sump for take-off is 13 quarts.

Figure 6-1.

NOTE

On the first operation of the oil dilution system each season, use the full dilution period, drain the oil, clean the screen, refill with new oil and redilute as required.

If the full dilution time was used, beginning with a full oil sump (12 quarts), subsequent starts and engine warm-up should be prolonged to evaporate enough of the fuel to lower the oil sump level to 13 quarts prior to take-off. Otherwise, the sump may overflow when the airplane is nosed up for climb.

To avoid progressive dilution of the oil, flights of at least two hours' duration should be made between oil dilution operations.

STATIC PRESSURE ALTERNATE SOURCE VALVE.

A static pressure alternate source valve may be installed in the static system for use when the external static sources are malfunctioning. This valve also permits draining condensate from the static lines.

If erroneous instrument readings are suspected due to water or ice in the static pressure lines, the static pressure alternate source valve should be opened, thereby supplying static pressure from the cabin. Cabin pressures will vary, however, with open cabin ventilators or windows. The most adverse combinations will result in airspeed and altimeter variations of no more than 2 MPH and 20 feet, respectively.

RADIO SELECTOR SWITCHES

RADIO SELECTOR SWITCH OPERATION.

Operation of the radio equipment is normal as covered in the respective radio manuals. When more than one radio is installed, an audio switching system is necessary. The operation of this switching system is described below.

TRANSMITTER SELECTOR SWITCH.

The transmitter selector switch has two positions. When two transmitters are installed, it is necessary to switch the microphone to the radio unit the pilot desires to use for transmission. This is accomplished by placing the transmitter selector switch in the position corresponding to the radio unit which is to be used. The up position selects the upper transmitter and the down position selects the lower transmitter.

The installation of Cessna radio equipment provides certain audio

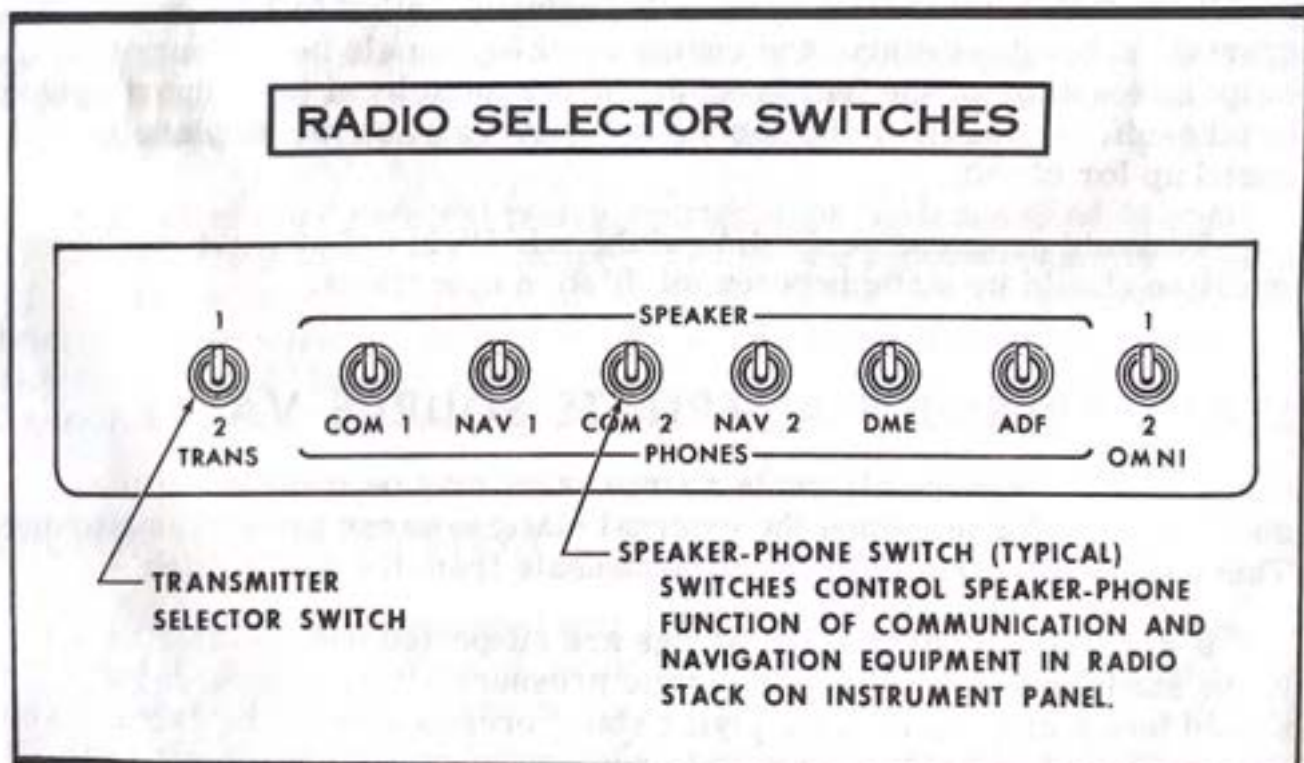


Figure 6-2.

back-up capabilities and transmitter selector switch functions that the pilot should be familiar with. When the transmitter selector switch is placed in position 1 or 2, the audio amplifier of the corresponding transceiver is utilized to provide the speaker audio for all radios. If the audio amplifier in the selected transceiver fails, as evidenced by loss of speaker audio for all radios, place the transmitter selector switch in the other transceiver position. Since an audio amplifier is not utilized for headphones, a malfunctioning amplifier will not affect headphone operation.

SPEAKER-PHONE SWITCHES.

The speaker-phone switches determine whether the output of the receiver in use is fed to the headphones or through the audio amplifier to the speaker. Place the switch for the desired receiving system either in the up position for speaker operation or in the down position for headphones.

AUTOPILOT-OMNI SWITCH.

When a Nav-O-Matic autopilot is installed with two compatible omni receivers, an autopilot-omni switch is utilized. This switch selects the omni receiver to be used for the omni course sensing function of the autopilot. The up position selects the upper omni receiver in the radio panel stack and the down position selects the lower omni receiver.

OXYGEN SYSTEM

A four-place oxygen system is available for your airplane. In this system, an oxygen cylinder, located behind the rear baggage compartment wall, supplies the oxygen. Cylinder pressure is reduced to an operating pressure of 70 psi by a pressure regulator attached to the cylinder. A shut-off valve is included as part of the regulator assembly. An oxygen cylinder filler valve is located on the left side of the rear baggage compartment wall. Cylinder pressure is indicated by a pressure gage located on the wall above the filler valve.

Four oxygen outlets are provided in the cabin ceiling just above the side windows; one at each of the seating positions. Partial-rebreathing type oxygen masks, complete with vinyl plastic hoses and flow indicators, are provided.

A remote shut-off valve control, located adjacent to the pilot's oxygen outlet, is used to shut off the supply of oxygen to the system when not in use. The control is mechanically connected to the shut-off valve at the cylinder. With the exception of the shut-off function, the system is completely automatic and requires no manual regulation for change of altitude.

OXYGEN SYSTEM OPERATION.

Prior to flight, check to be sure that there is an adequate oxygen supply for the trip, by noting the oxygen pressure gage reading. Refer to paragraph OXYGEN DURATION CALCULATION, and to the Oxygen Duration Chart (figure 6-3). Also, check that the face masks and hoses are accessible and in good condition.

To use the oxygen system, proceed as follows:

NOTE

Permit no smoking when using oxygen.


- (1) Select mask and hose.

NOTE

The hose assembly provided for the pilot is of a higher flow rate than those for the passengers; it is color-coded with an orange band adjacent to the plug-in fitting.

OXYGEN DURATION CHART

(48 CUBIC FEET CAPACITY)

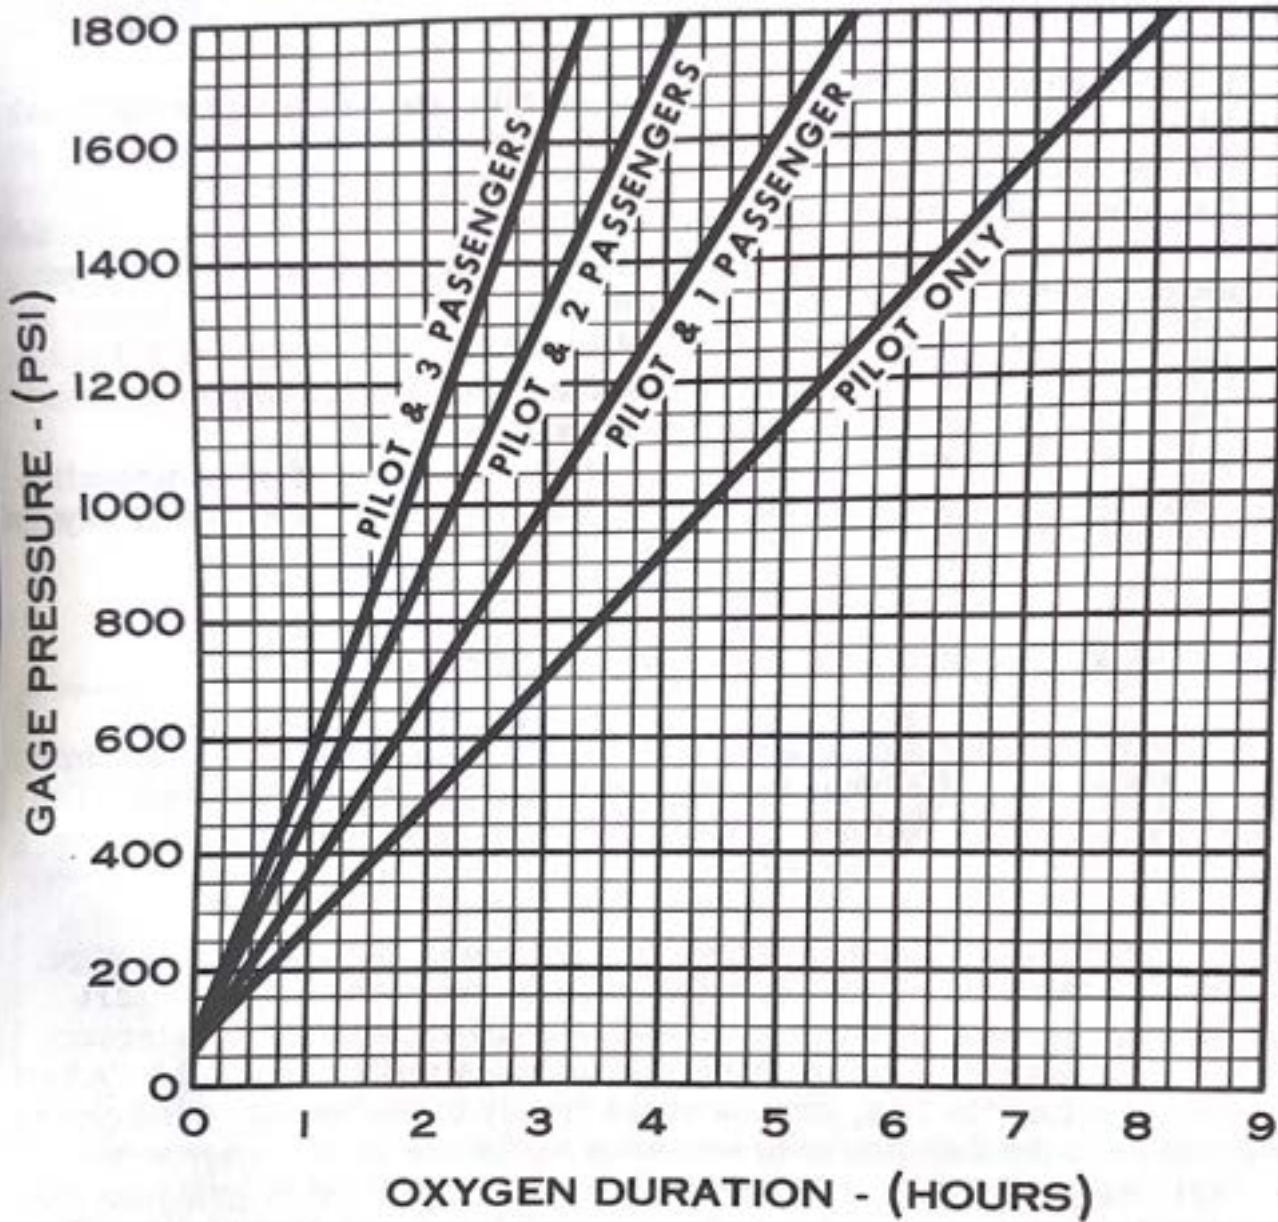

NOTE: This chart is based on a pilot with an orange color-coded oxygen line fitting and passengers with green color-coded line fittings.

Figure 6-3.

The hoses provided for the passengers are color-coded with a green band. If the aircraft owner prefers, he may provide higher flow rate hoses for all passengers. In any case, it is recommended that the pilot use the larger capacity hose. The pilot's mask is equipped with a microphone to facilitate the use of the radio while using oxygen.

- (2) Attach mask to face and adjust metallic nose strap for snug mask fit.
- (3) Select oxygen outlet located nearest to the seat you are occupying, and plug delivery hose into it. When the oxygen supply is turned on, oxygen will flow continuously at the proper rate of flow for any altitude without any manual adjustments.
- (4) Position oxygen supply control knob "ON."
- (5) Check the flow indicator in the face mask hose. Oxygen is flowing if the indicator is being forced toward the mask.
- (6) Unplug the delivery hose from the outlet coupling when discontinuing use of oxygen system. This automatically stops the flow of oxygen.
- (7) Position oxygen supply control knob "OFF."

OXYGEN DURATION CALCULATION.

The Oxygen Duration Chart (figure 6-3) should be used in determining the usable duration (in hours) of the oxygen supply in your airplane. The following procedure outlines the method of finding the duration from the chart.

- (1) Note the available oxygen pressure shown on the pressure gage.
- (2) Locate this pressure on the scale on the left side of the chart, then go across the chart horizontally to the right until you intersect the line representing the number of persons making the flight. After intersecting the line, drop down vertically to the bottom of the chart and read the duration in hours given on the scale.
- (3) As an example of the above procedure, 1400 psi of pressure will safely sustain the pilot only for nearly 6 hours and 15 minutes. The same pressure will sustain the pilot and three passengers for approximately 2 hours and 30 minutes.

NOTE

The Oxygen Duration Chart is based on a standard configuration oxygen system having one orange color-coded hose assembly for the pilot and green color-coded hoses

for the passengers. If orange color-coded hoses are provided for the passengers in your airplane, it will be necessary to estimate new duration figures due to the greater consumption of oxygen with these hoses.

OXYGEN SYSTEM SERVICING.

The oxygen cylinder, when fully charged, contains approximately 48 cubic feet of oxygen, under a pressure of 1800 psi at 70°F. Filling pressures will vary, however, due to the ambient temperature in the filling area, and because of the temperature rise resulting from compression of the oxygen. Because of this, merely filling to 1800 psi will not result in a properly filled cylinder. Fill to the pressures indicated in the following table for the ambient temperature.

IMPORTANT

Oil, grease, or other lubricants in contact with oxygen create a serious fire hazard, and such contact must be avoided when handling oxygen equipment.

AMBIENT TEMPERATURE °F	FILLING PRESSURE PSIG	AMBIENT TEMPERATURE °F	FILLING PRESSURE PSIG
0	1600	50	1825
10	1650	60	1875
20	1700	70	1925
30	1725	80	1975
40	1775	90	2000

CESSNA ECONOMY MIXTURE INDICATOR

The Cessna Economy Mixture Indicator is an exhaust gas temperature sensing device which is used to aid the pilot in selecting the most desirable fuel-air mixture for cruising flight at less than 75% power. Exhaust gas temperature (EGT) varies with the ratio of fuel-to-air mixture entering the engine cylinders.

OPERATING INSTRUCTIONS.

- (1) In take-off and full power climb, use full rich mixture.
- (2) In level flight (or cruising climb at less than 75% power), lean the mixture to peak EGT; then enrichen as desired using the following table as a guide:

Mixture Description	EGT	TAS Loss From Best Power	Range Increase From Best Power
BEST POWER (Maximum Speed)	Peak Minus 125° (enrichen)	0 MPH	0%
NORMAL LEAN (Owner's Manual & Computer Performance)	Peak Minus 75° (enrichen)	1 MPH	10%
MAXIMUM LEAN	Peak Minus 25° (enrichen)	3 MPH	20%

NOTE

While leaning the mixture under some operating conditions, engine roughness may occur before peak EGT is reached. In this case, use the EGT corresponding to the onset of roughness as the reference point instead of peak EGT.

NOTES

Changes in altitude or power setting require the EGT to be re-checked and the mixture re-set.

Operation at peak EGT is not authorized for normal continuous operation, except to establish peak EGT for reference. Operation on the lean side of peak EGT or within 25° of peak EGT is not approved. The yellow reference pointer may be set to provide a specific point to lean to. It can be positioned manually by turning the screw adjustment on the face of the meter.

(3) Use rich mixture (or mixture appropriate for field elevation) in idle descents or landing approaches. Leaning technique for cruise descents may be with EGT reference method (at least every 5000 feet) or by simply enriching to avoid engine roughness if numerous power reductions are made.

TRUE AIRSPEED INDICATOR

A true airspeed indicator is available to replace the standard airspeed indicator in your airplane. The true airspeed indicator has a calibrated rotatable ring which works in conjunction with the airspeed indicator dial in a manner similar to the operation of a flight computer.

TO OBTAIN TRUE AIRSPEED, rotate ring until pressure altitude is aligned with outside air temperature in degrees Fahrenheit. Then read true airspeed on rotatable ring opposite airspeed needle.

NOTE

Pressure altitude should not be confused with indicated altitude. To obtain pressure altitude, set barometric scale on altimeter to "29.92" and read pressure altitude on altimeter. Be sure to return altimeter barometric scale to original barometric setting after pressure altitude has been obtained.

WING LEVELER

A wing leveler may be installed to augment the lateral stability of the airplane. The system uses the Turn Coordinator for roll and yaw sensing. Vacuum pressure, from the engine-driven vacuum pump, is routed from the Turn Coordinator to cylinder-piston servo units attached to the aileron control system. As the airplane deviates from a wing level attitude, vacuum pressure in the servo units is increased or relieved as needed to actuate the ailerons to oppose the deviations.

A separately mounted push-pull control knob, labeled "WING LVLR", is provided on the left side of the instrument panel to turn the system on and off. A "ROLL TRIM" control knob on the Turn Coordinator is used for manual roll trim control to compensate for asymmetrical loading of fuel and passengers, and to optimize system performance in climb, cruise and let-down.

OPERATING CHECK LIST

TAKE-OFF.

- (1) "WING LVLR" Control Knob -- Check in off position (full in).

CLIMB.

- (1) Adjust elevator and rudder trim for climb.
- (2) "WING LVLR" Control Knob -- Pull control knob "ON."
- (3) "ROLL TRIM" Control Knob -- Adjust for wings level attitude.

CRUISE.

- (1) Adjust power and elevator and rudder trim for level flight.
- (2) "ROLL TRIM" Control Knob -- Adjust as desired.

DESCENT.

- (1) Adjust power and elevator and rudder trim for desired speed and rate of descent.
- (2) "ROLL TRIM" Control Knob -- Adjust as desired.

LANDING.

- (1) Before landing, push "WING LVLR" control knob full in to the off position.

EMERGENCY PROCEDURES

If a malfunction should occur, the system is easily overpowered with pressure on the control wheel. The system should then be turned off. In the event of partial or complete vacuum failure, the wing leveler will automatically become inoperative. However, the Turn Coordinator used with the wing leveler system will not be affected by loss of vacuum since it is designed with a "back-up" system enabling it to operate from either vacuum or electrical power in the event of failure of one of these sources.

OPERATING NOTES

- (1) The wing leveler system may be overpowered at any time without damage or wear. However, for extended periods of maneuvering it may be desirable to turn the system off.
- (2) It is recommended that the system not be engaged during take-off and landing. Although the system can be easily overpowered, servo forces could significantly alter the manual "feel" of the aileron control, especially should a malfunction occur.

FUEL TANK QUICK-DRAIN VALVE KIT

Two fuel tank quick-drain valves and a fuel sampler cup are available as a kit to facilitate daily draining and inspection of fuel in the main tanks for the presence of water and sediment. The valves replace existing fuel tank drain plugs located at the lower inboard area of the wing. The fuel sampler cup, which may be stowed in the map compartment, is used to drain the valves. The sampler cup has a probe in the center of the cup. When the probe is inserted into the hole in the bottom of the drain valve and pushed upward, fuel flows into the cup to facilitate visual inspection of the fuel. As the cup is removed, the drain valve seats, stopping the flow of fuel.

ALPHABETICAL INDEX

A

After Landing, 1-4
Air Filter,
 carburetor, 4-8
 vacuum system, 4-9
Aircraft File, 4-5
Airplane Mooring, 4-1
Airspeed Correction Table, 5-1
Airspeed Limitations, 3-2
Alternator, 2-4
Aluminum Surfaces, 4-2
Ammeter, 1-6, 2-3, 2-4
Authorized Operations, 3-1
Autopilot-Omni Switch, 6-5

B

Baggage, Weight, inside front cover
Battery, 2-4, 4-8
Battery Contactor, 2-4
Beacon, Flashing, 2-3
Before Entering Airplane, 1-1
Before Landing, 1-4
Before Starting Engine, 1-1
Before Take-Off, 1-2, 2-7
Brake Handle, Parking, 1-6
Brake Master Cylinders, 4-8

C

Cabin Heat and Cabin Air Control
 Knobs, 1-6
Cabin Heating, Ventilating and
 Defrosting System, 2-5
Capacity, Fuel, inside covers
Capacity, Oil, inside covers

Carburetor, 2-2
Carburetor Air Filter, 4-8
Carburetor Air Heat Knob, 1-6
Carburetor Air Temperature
 Gage, 1-6, 3-3
Care,
 interior, 4-3
 propeller, 4-3
Center of Gravity Moment
 Envelope, 3-6
Check List, Servicing Intervals,
 4-8
Cigar Lighter, 1-6, 2-4
Circuit Breakers and Fuses, 1-6,
 2-3, 2-4
Climb, 1-3, 2-9
 data, 5-3
 maximum performance, 1-3
 normal, 1-3
Clock, 2-4
Cold Weather Equipment, 6-1
Cold Weather Operation, 2-11
 starting, 2-11
Compartment, Map, 1-6
Control Wheel Map Light, 2-5
Correction Table, Airspeed, 5-1
Cowl Flap Handle, 1-6
Cruise Performance, 5-4, 5-5, 5-6
 optimum, 2-10
Cruising, 1-4, 2-9
Cylinder Head Temperature
 Gage, 1-6, 3-2

D

Data,
 climb, 5-3
 cruise, 2-9, 5-4, 5-5, 5-6

landing, 5-7
take-off, 5-3
Defroster Control Knob, 1-6
Diagram,
 electrical system, 2-4
 exterior inspection, iv
 fuel, 2-2
 principal dimensions, ii
 taxiing, 2-6
Dilution System, Oil, 6-2
Dimensions, Principal, ii
Dipstick, Oil, 4-7
Drain Plug, Fuel Line, 4-8
Drain Plugs, Fuel Tank Sump, 4-8

E

Economy Mixture Indicator, 6-10
 operating instructions, 6-10
Electrical System, 2-3
 alternator, 2-4
 ammeter, 2-3, 2-4
 battery, 2-4, 4-8
 battery contactor, 2-4
 cigar lighter, 2-4
 circuit breakers and fuses,
 2-3, 2-4
 clock, 2-4
 flashing beacon, 2-3
 ground service plug receptacle,
 2-4, 6-2
 magnetos, 2-4
 master switch, 2-4
 regulator, 2-4
 reverse polarity contactor, 2-4
 schematic, 2-4
 split bus contactor, 2-4
 starter, 2-4
 starter contactor, 2-4
 switches, 1-6, 2-4
Electrical Switches, 1-6, 2-4
Elevator Trim Control Wheel, 1-6
Empty Weight, inside front cover

Engine, inside front cover
 before starting, 1-1
 instrument markings, 3-2
 instrument group, 1-6
 oil, 4-8, inside back cover
 oil dipstick, 4-7
 oil filler, 4-6
 oil filter, 4-8
 oil screen, 4-8
 operation limitations, 3-2
 primer, 2-2
 starting, 1-2, 2-7, 2-11
Engine Instrument Markings, 3-2
Exhaust Gas Temperature Gage,
 1-6
Exterior Inspection Diagram, iv

F

File, Aircraft, 4-5
Filler, Oil, 4-6
Filter, Oil, 4-8
Flashing Beacon, 2-3
Flight Hour Recorder, 1-6, 2-4
Flight Instrument Group, 1-6
Fuel Quantity Indicators, 1-6, 3-3
Fuel System, 2-1
 capacity, inside covers
 carburetor, 2-2
 fuel quantity indicators, 3-3
 line drain plug, 4-8
 mixture control knob, 1-6, 2-2
 primer, 2-2
 quick-drain valve kit, 6-13
 schematic, 2-2
 selector valve, 2-2
 selector valve handle, 1-6
 strainer, 2-2, 4-6, 4-8
 tank fillers, 4-6
 tank sump drains, 4-8
 throttle, 1-6, 2-2
 wing tanks, 2-2, 6-1
Fuel Tanks, Long Range, 6-1

Fuses and Circuit Breakers, 2-3,
2-4

G

Glide, Maximum, 5-8
Graph, Loading, 3-5
Gross Weight, inside front cover
Ground Handling, 4-1
Ground Service Plug Receptacle,
2-4, 6-2

H

Handling Airplane on Ground, 4-1
Heating, Ventilating and Defrosting
System, 2-5
Hot Weather Operation, 2-14
Hydraulic Fluid, inside back cover

I

Ignition-Starter Switch, 1-6, 2-4
Inspection Diagram, Exterior, iv
Inspection Service - Inspection
Periods, 4-4
Instrument Lights Rheostat, 1-6
Instrument Markings, Engine, 3-2
Instrument Panel, 1-6
Interior Care, 4-3

L

Landing, inside front cover, 2-11
after, 1-4
before, 1-4
distance table, 5-7
normal, 1-4
Let-Down, 1-4
Limitations, Airspeed, 3-2

Limitations, Engine Operation, 3-2
Line Drain Plug, Fuel, 4-8
Loading Graph, 3-5
Loading Problem, Sample, 3-4
Long Range Fuel Tanks, 6-1
Lubrication and Servicing
Procedures, 4-6

M

Magnetos, 2-4
Maneuvers - Normal Category,
3-1
Manifold Pressure Gage, 1-6, 3-2
Map Compartment, 1-6
Marker Beacon Indicator Lights
and Switches, 1-6
Master Cylinders, Brake, 4-8
Master Switch, 1-6, 2-4
Maximum Glide, 5-8
Maximum Performance Climb, 1-3
Maximum Performance Take-Off,
1-3
Maximum Rate-of-Climb Data, 5-3
Microphone, 1-6
Mixture Control Knob, 1-6, 2-2
Mixture Indicator, Economy, 6-10
operating instructions, 6-10
Moment Envelope, Center of
Gravity, 3-6
Mooring Your Airplane, 4-1

N

Non-Congeaing Oil Cooler, 6-1
Normal Category, Maneuvers, 3-1
Normal Climb, 1-3
Normal Landing, 1-4
Normal Take-Off, 1-3
Nose Gear Shock Strut, 4-9, inside
back cover
Nose Gear Torque Links, 4-8

O

- Oil System,
 - capacity, inside covers
 - dilution system, 6-2
 - dilution table, 6-3
 - oil, 4-6, 4-8, inside back cover
 - oil cooler, non-congealing, 6-1
 - oil dipstick, 4-7
 - oil filler, 4-6
 - oil filter, 4-8
 - oil pressure gage, 1-6, 3-2
 - oil screen, 4-8
 - oil temperature gage, 1-6, 3-2
- Operation, Cold Weather, 2-11
- Operation, Hot Weather, 2-14
- Operation Limitations, Engine, 3-2
- Operations, Authorized, 3-1
- Optimum Cruise Performance, 2-10
- Optional Radio Space, 1-6
- Owner Follow-Up System, 4-10
- Oxygen System, 6-6
 - cylinder, 4-7
 - duration calculation, 6-8
 - duration chart, 6-7
 - filler valve, 4-7
 - operation, 6-6
 - servicing, 6-9, inside back cover

P

- Painted Surfaces, 4-3
- Parking Brake Handle, 1-6
- Performance, Cruise, 2-9, 5-4, 5-5, 5-6
- Performance-Specifications, inside front cover
- Power Loading, inside front cover
- Primer, Engine, 1-6, 2-2
- Principal Dimensions, ii

Index-4

- Propeller, inside front cover care, 4-3
- Propeller Control Knob, 1-6

R

- Radio Dial Lights Rheostat, 1-6
- Radios, 1-6
 - optional radio space, 1-6
- Radio Selector Switches, 1-6, 6-4
 - autopilot-omni switch, 6-5
 - operation, 6-4
 - speaker-phone switches, 6-5
 - transmitter selector switch, 6-4
- Range, inside front cover
- Rate of Climb, inside front cover data, 5-3
- Rear View Mirror, 1-6
- Regulator, 2-4
- Reverse Polarity Contactor, 2-4
- Rudder Trim Control Wheel, 1-6

S

- Sample Loading Problem, 3-4
- Secure Aircraft, 1-5
- Selector Valve, Fuel, 2-2
- Service Ceiling, inside front cover
- Servicing and Lubrication Procedures, 4-6
- Servicing Intervals Check List, 4-8
- Servicing Requirements, inside back cover
- Shimmy Dampener, 4-8
- Spark Plugs, 4-8
- Speaker-Phone Switches, 6-4, 6-5
- Speed, inside front cover
- Spins, 2-11
- Split Bus Contactor, 2-4
- Stalls, 2-11
- Stall Speeds, 5-2

Starter, 2-4
Starter Contactor, 2-4
Starting Engine, 1-2, 2-7, 2-11
Static Pressure Alternate Source
Valve, 6-3
Strainer, Fuel, 2-2, 4-6, 4-8
Suction Relief Valve Inlet Screen,
4-8
Sump Drain Plugs, Fuel Tank, 4-8
Surfaces,
aluminum, 4-2
painted, 4-3
System,
electrical, 2-3
fuel, 2-1
heating, ventilating and
defrosting, 2-5
oil dilution, 6-2
owner follow-up, 4-10
oxygen, 6-6

T

Table of Contents, iii
Tachometer, 1-6, 3-3
Take-Off, inside front cover, 1-3,
2-8
before, 1-2, 2-7
data, 5-3
maximum performance, 1-3
normal, 1-3
Taxiing, 2-7
diagram, 2-6

Throttle, 1-6, 2-2
Tie-Down Procedure, 4-1
Tire Pressures, inside back cover
Transmitter Selector Switch, 6-4
True Airspeed Indicator, 6-11

V

Vacuum System Air Filter, 4-9
Vacuum System Oil Separator, 4-8
Valve, Fuel Selector, 2-2

W

Weight,
empty, inside front cover
gross, inside front cover
Weight and Balance, 3-4
loading graph, 3-5
moment envelope, 3-6
sample loading problem, 3-4
Wheel, Rudder Trim Control, 1-6
Wheel Bearings, Main 4-9
Windshield and Windows, 4-2
Wing Flap Switch, 1-6
Wing Leveler, 6-12
emergency procedures, 6-13
operating check list, 6-12
operating notes, 6-13
Wing Loading, inside front cover
Wing Tanks, 2-2, 6-1
Winterization Kit, 6-1

WARRANTY

The Cessna Aircraft Company ("Cessna") warrants each new aircraft manufactured by it, and all new aircraft equipment and accessories, including Cessna-Crafted Electronics (as herein defined), and all new service parts for such aircraft, aircraft equipment and accessories sold by it, to be free from defects in material and workmanship under normal use and service for a period of six (6) months after delivery to the original retail purchaser or first user in the case of aircraft, aircraft equipment and accessories (except Cessna-Crafted Electronics as herein defined) and service parts therefor, and for a period of one (1) year after such delivery in the case of Cessna-Crafted Electronics (which term includes all communication, navigation and autopilot systems bearing the name "Cessna", beginning at the connection to the aircraft electrical system (bus bar) and including "black boxes", antennas, microphones, speakers and other components and associated wiring but excluding gyro instruments used in connection with autopilot and navigation systems) and service parts therefor.

Cessna's obligation under this warranty is limited to repairing or replacing, at its option, any part or parts which, within the applicable six (6) or twelve (12) months period as above set forth, shall be returned transportation charges prepaid to Cessna at Wichita, Kansas, or to any Cessna appointed or Cessna Distributor appointed dealer authorized by such appointment to sell the aircraft, equipment, accessories and service parts of the type involved and which upon examination shall disclose to Cessna's satisfaction to have been thus defective. (A new warranty period is not established for replacements. Replacements are warranted for the remainder of the applicable six (6) or twelve (12) months original warranty period). The repair or replacement of defective parts under this warranty will be made by Cessna or the dealer without charge for parts, or labor for removal, installation and/or actual repair of such defective parts. (Locations of such dealers will be furnished by Cessna on request).

The provisions of this warranty do not apply to any aircraft, equipment, accessories (including Cessna-Crafted Electronics) or service parts therefor manufactured or sold by Cessna which have been subject to misuse, negligence, or accident, or which shall have been repaired or altered outside of Cessna's factory in any way so as in the judgment of Cessna to affect adversely its performance, stability and reliability, nor to normal maintenance services (such as engine tune up, cleaning, control rigging, brake and other mechanical adjustments, maintenance inspections, etc.) and the replacement of service items (such as spark plugs, brake linings, filters, hoses, belts, tires, etc.) made in connection with such services or required as maintenance, nor to normal deterioration of soft trim and appearance items (such as paint, upholstery, rubber-like items, etc.) due to wear and exposure.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTIES, EXPRESSED OR IMPLIED IN FACT OR BY LAW, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND OF ANY OTHER OBLIGATION OR LIABILITY ON THE PART OF CESSNA TO ANYONE OF ANY NATURE WHATSOEVER BY REASON OF THE MANUFACTURE AND/OR SALE OR THE USE OF SUCH AIRCRAFT PRODUCTS, INCLUDING LIABILITY FOR CONSEQUENTIAL OR SPECIAL DAMAGES, AND CESSNA NEITHER ASSUMES NOR AUTHORIZES ANYONE TO ASSUME FOR IT ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION WITH SUCH AIRCRAFT PRODUCTS.

SERVICING REQUIREMENTS

FUEL:

AVIATION GRADE -- 80/87 MINIMUM GRADE
CAPACITY EACH STANDARD TANK -- 32.5 GALLONS
CAPACITY EACH LONG RANGE TANK -- 42.0 GALLONS

ENGINE OIL:

AVIATION GRADE -- SAE 50 ABOVE 40° F.
SAE 10W30 OR SAE 30 BELOW 40° F.
(MULTI-VISCOSITY OIL WITH A RANGE OF SAE 10W30
IS RECOMMENDED FOR IMPROVED STARTING IN COLD
WEATHER. DETERGENT OR DISPERSANT OIL, CON-
FORMING TO CONTINENTAL MOTORS SPECIFICATION
MHS-24A, MUST BE USED.

CAPACITY OF ENGINE SUMP -- 12 QUARTS
(DO NOT OPERATE ON LESS THAN 9 QUARTS. TO
MINIMIZE LOSS OF OIL THROUGH BREATHER, FILL
TO 10 QUART LEVEL FOR NORMAL FLIGHTS OF LESS
THAN 3 HOURS. FOR EXTENDED FLIGHT, FILL TO
12 QUARTS. IF OPTIONAL OIL FILTER IS INSTALLED,
ONE ADDITIONAL QUART IS REQUIRED WHEN THE
FILTER ELEMENT IS CHANGED.)

HYDRAULIC FLUID:

MIL-H-5606 HYDRAULIC FLUID

OXYGEN:

AVIATOR'S BREATHING OXYGEN -- SPEC. NO. MIL-O-27210
MAXIMUM PRESSURE -- 1800 PSI AT 70° F.
(CYLINDER TEMPERATURE STABILIZED AFTER FILLING)
REFER TO PAGE 6-9 FOR FILLING PRESSURES.

TIRE PRESSURE:

MAIN WHEELS -- 32 PSI ON 6.00 × 6 TIRES
-- 25 TO 35 PSI ON 8.00 × 6 TIRES (OPT)
NOSE WHEEL -- 50 PSI ON 5.00 × 5 TIRE
-- 30 PSI ON 6.00 × 6 TIRE (OPT)

NOSE GEAR SHOCK STRUT:

KEEP FILLED WITH FLUID AND INFLATED TO 55-60 PSI.